

Quick reference


SMART Audio™ classroom amplification system

Models CAS-340 and CAS-360


CAS-340 control unit top view



CAS-360 control unit top view

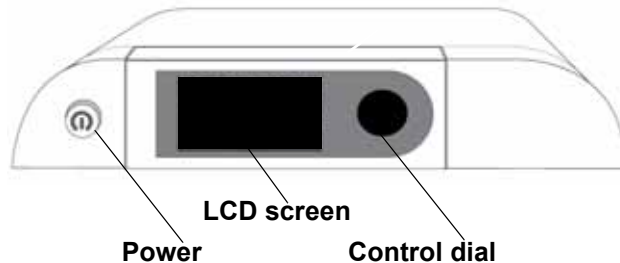

CAS-340 and CAS-360 control unit bottom view

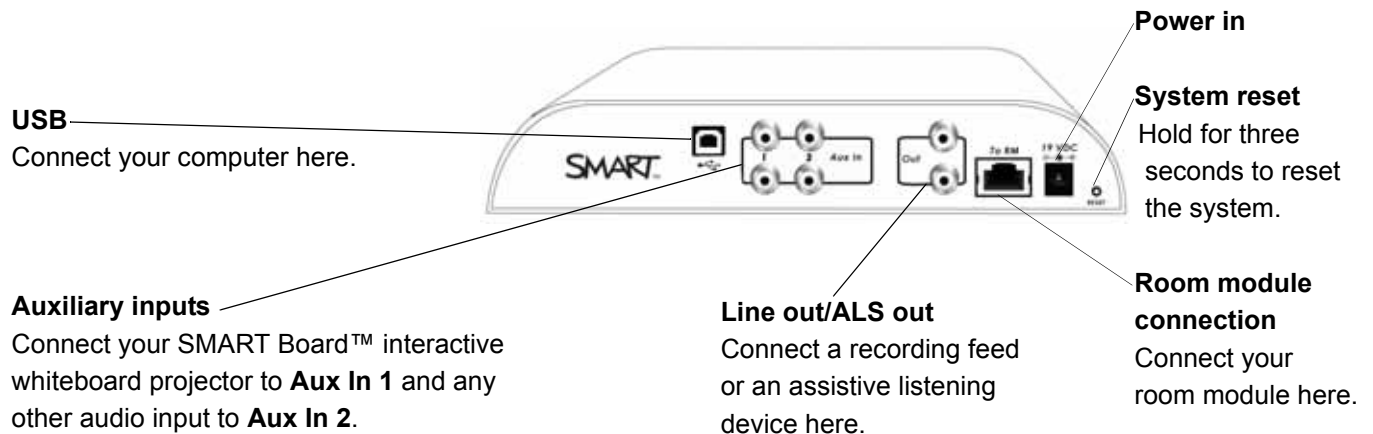

Microphone

To turn on the microphone

Press any button for one second.

To turn off the microphone

Press the mute button for four seconds.


Microphone input

3.5 mm jack for optional external microphone input



Auxiliary input

3.5 mm jack for MP3 player or other audio source

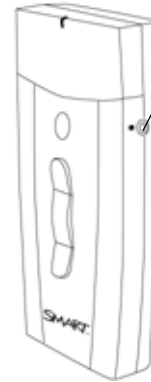

Soft button

Press to mute auxiliary audio input at the control unit.

Volume up

Press to increase the microphone volume.

Mute


Press to mute the microphone.

Volume down

Press to decrease the microphone volume.

To adjust auxiliary input volume

Press the mute button and then press the volume buttons to adjust volume for auxiliary audio inputs connected to the control unit.

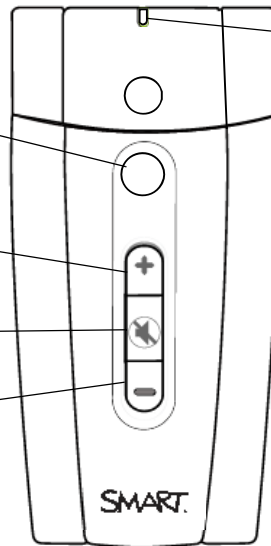


Status light

- Green – On and connected to the room module
- Flashing green – Muted
- Amber – Not connected to the room module
- Flashing red – Low battery or charging

To charge the microphone

Place the microphone facing forward in the microphone charging cradle after each use.

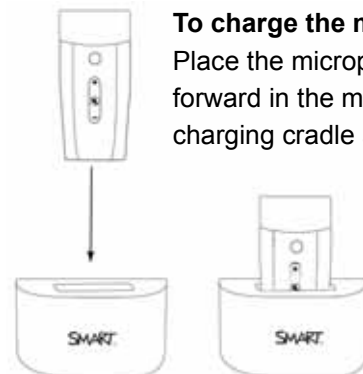

To customise the microphone

Refer to the *SMART Audio CAS-340 and CAS-360 classroom amplification system user's guide* (smarttech.com/kb/155322) for more information about customising your microphone to select the microphone channel, to enable or disable buttons, to change the function of the soft button and more.