

SMART Board® 600i6

Interactive whiteboard system

Configuration and user's guide

SMART®

FCC warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the US Federal Communications Commission Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Trade-mark notice

SMART Board, SMART Notebook, smarttech, the SMART logo and all SMART taglines are trade-marks or registered trade-marks of SMART Technologies ULC in the US and/or other countries. Texas Instruments, BrilliantColor, DLP and DLP Link are trade-marks of Texas Instruments. Microsoft, Windows and Internet Explorer are either registered trade-marks or trade-marks of Microsoft Corporation in the US and/or other countries. Blu-ray is a trade-mark of the Blu-ray Disc Association. All other third-party product and company names may be trade-marks of their respective owners.

Copyright notice

© 2013 SMART Technologies ULC. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language in any form by any means without the prior written consent of SMART Technologies ULC. Information in this manual is subject to change without notice and does not represent a commitment on the part of SMART.

This product and/or use thereof covered by one or more of the following US patents; smarttech.com/patents.

09/2013

Important information

Before you install and use your SMART Board® 480i6 interactive whiteboard system, read and understand the safety warnings and precautions in this user's guide and the included warnings document. These safety warnings and precautions describe the safe and correct operation of your interactive whiteboard system and its accessories, helping you to prevent injuries and equipment damage. Ensure that your interactive whiteboard system is always being used correctly.

In this document, "interactive whiteboard system" refers to the following:

- SMART Board 600 series interactive whiteboard
- SMART UF70 or SMART UF70w projector
- Accessories and optional equipment

The projector included with your system is designed to work only with certain SMART Board interactive whiteboard models. Contact your authorised SMART reseller (smarttech.com/where) for more information.

Safety warnings, cautions and important information

Installation



WARNING

- Failure to follow the installation instructions included with your SMART product could result in personal injury and damage to the product.
- To reduce the risk of fire or electric shock, do not expose the SMART product to rain or moisture.
- Two people are required to mount your SMART product because it may be too heavy for one person to safely manoeuvre.

When you lift your interactive whiteboard, you and your assistant should stand on either side of the screen, supporting its weight at the bottom whilst balancing the top with your other hands.

IMPORTANT INFORMATION

- When mounting the projector boom on a framed or hollow wall, attach the mounting bracket to a stud to safely support the projector's weight. If you use only drywall anchors, the drywall can fail, resulting in possible personal injury, and damage to the product which may not be covered by your warranty.
- Do not leave cables on the floor where they can be a tripping hazard. If you must run a cable over the floor, lay it in a flat, straight line and secure it to the floor with tape or a cable management strip of a contrasting colour. Handle cables carefully and avoid excessive bending.



CAUTION

- Do not operate this unit immediately after moving it from a cold location to a warm location. When the unit is exposed to such a change in temperature, moisture can condense on the lens and crucial internal parts. Allow the system to stabilise to room temperature before operation to prevent possible damage to the unit.
- Do not place the unit in hot locations, such as near heating equipment. Doing so could cause a malfunction and shorten the life of the projector.
- Avoid setting up and using the SMART product in an area with excessive levels of dust, humidity and smoke.
- Do not place your SMART product in direct sunlight or near any appliance that generates a strong magnetic field.
- If you need to lean the interactive whiteboard against a wall before you mount it, make sure that it remains in an upright position, resting on the pen tray brackets, which can sustain the weight of the interactive whiteboard.



Do not rest the interactive whiteboard on its side or on the top of the frame.

- You must connect the USB cable that came with your SMART Board interactive whiteboard to a computer that has a USB compliant interface and that bears the USB logo. In addition, the USB source computer must be compliant with CSA/UL/EN 60950 and bear the CE mark and CSA and/or UL Mark(s) for CSA/UL 60950. This is for operating safety and to avoid damage to the SMART Board interactive whiteboard.



IMPORTANT

- The SMART Board 680i6 and 685i6 interactive whiteboard system textless installation guide is also available online (smarttech.com/kb/170498).
- Make sure an electrical socket is near your SMART product and remains easily accessible during use.

IMPORTANT INFORMATION

- Using your SMART product near a TV or radio could cause interference to the images or sound. If this happens, move the TV or radio away from the projector.

Operation



WARNING

- If you are using an external audio system, use only the power supply included with that product. Using the wrong power supply might create a safety hazard or damage the equipment. If in doubt, refer to the specification sheet for your product to verify the power supply type.
- Do not climb (or allow children to climb) on a wall- or stand-mounted SMART Board interactive whiteboard.

Do not climb on, hang from or suspend objects from the projector boom.

Climbing on the interactive whiteboard or projector boom could result in personal injury or product damage.



CAUTION

- Do not block the projector's ventilation slots and openings.
- If dust or small items prevent pen tray buttons from being pressed or cause constant button contact, remove the obstructions carefully.



IMPORTANT

- Keep your remote control in a safe place because there is no other way to access menu options.
- Do not disconnect cables from the ECP to connect peripheral devices because you could disconnect controls for your interactive whiteboard.
- Disconnect the product from its power source when it's not used for a long period.

Other precautions

If you own a SMART product other than a SMART Board 680i6 and 685i6 series interactive whiteboard system, refer to the installation manual for your product for relevant warnings and maintenance instructions.

Environmental requirements

Before you install your SMART Board 480 interactive whiteboard system, review the following environmental requirements.

Environmental requirement	Parameter
Operating temperature	<ul style="list-style-type: none"> 5°C to 35°C (41°F to 95°F) from 0m to 1800m (0' to 6000') 5°C to 30°C (41°F to 86°F) from 1800m to 3000m (6000' to 9800')
Storage temperature	
Humidity	<ul style="list-style-type: none"> Humidity above 80% could cause slight wrinkling in the screen surface sheet. The wrinkles disappear when the humidity lowers.
Water and fluid resistance	<ul style="list-style-type: none"> Intended for indoor use only. Doesn't meet any salt-spray or water ingress requirements. Don't pour or spray liquids directly onto your interactive whiteboard, the projector or any of its sub-components.
Dust	<ul style="list-style-type: none"> Intended for use in office and classroom environments. Not for industrial use where heavy dust and pollutants can cause malfunctions or impaired operation. Periodic cleaning is required in areas with heavier dust. See <i>Cleaning the projector</i> on page 35 for information on cleaning the projector.
Electrostatic discharge (ESD)	<ul style="list-style-type: none"> EN61000-4-2 severity level 4 for direct and indirect ESD No malfunction or damage up to 8kV (both polarities) with a 330 ohm, 150 pF probe (air discharge) Unmated connectors meet no malfunction or damage up to 4kV (both polarities) for direct (contact) discharge
Cables	<ul style="list-style-type: none"> All SMART Board 480i6 interactive whiteboard system cables should be shielded to prevent potential accidents and degraded video and audio quality.
Conducted and radiated emissions	<ul style="list-style-type: none"> EN55022/CISPR 22, Class A

Contents

Important information	i
Safety warnings, cautions and important information	i
Installation	i
Operation	iii
Other precautions	iii
Environmental requirements	iv
Chapter 1: About your interactive whiteboard system	1
SMART Board 480i6 interactive whiteboard system features	2
SMART Board 600 series interactive whiteboard	2
SMART UF70 or SMART UF70w projector	3
Extended Control Panel (ECP)	3
Included accessories	4
Remote control	4
Pens	4
Eraser	5
VGA connection kit	5
Chapter 2: Installing your interactive whiteboard system	7
Choosing a location	7
Choosing a height	8
Securing your interactive whiteboard system	8
Locking the pen tray to your interactive whiteboard	8
Securing the projector to the boom	8
Routing the cables	8
Installing SMART software	9
Changing your projector's aspect ratio for use with your SMART Board 690 interactive whiteboard	9
Chapter 3: Using your interactive whiteboard system	11
Using your projector	11

CONTENTS

Using your remote control	11
Replacing the remote control battery	12
Using the remote control buttons	13
Adjusting projector settings	14
Focusing the image	20
Adjusting the image	21
Projector connection diagram	21
Using your interactive whiteboard	23
Using the Extended Control Panel (ECP)	23
Appendix 4: Integrating other devices	27
Video format compatibility	27
Native video format	27
Video format compatibility	28
SMART UF70 projector	28
SMART UF70w projector	29
HD and SD signal format compatibility	31
SMART UF70 projector	31
SMART UF70w projector	31
Video system signal compatibility	32
SMART UF70 projector	32
SMART UF70w projector	32
Connecting peripheral sources and outputs	33
Chapter 5: Maintaining your interactive whiteboard system	35
Maintaining your interactive whiteboard	35
Cleaning the projector	35
Focusing and adjusting the projector image	36
Replacing the projector lamp	37
Removing and replacing the projector lamp module	37
Resetting the lamp hours	40

CONTENTS

Chapter 6: Troubleshooting your interactive whiteboard system	43
Before you start	44
Locating status lights	44
Locating serial numbers	45
Determining your interactive whiteboard system's status	45
Resolving interactive whiteboard issues	47
Resolving operation issues	47
Resolving connection issues	47
Resolving controller module issues	48
Resolving projector issues	48
Resolving projector errors	48
Resolving image issues	48
Loss of signal	48
Partial, scrolling or incorrectly displayed image	49
Unstable or flickering image	50
Frozen image	50
Your image doesn't fit the interactive whiteboard	51
The image from your connected laptop computer isn't projected	51
Unaligned projected image	51
Resolving audio issues	51
Resolving network communication issues	52
Resolving ECP issues	53
Accessing the service menu	53
Retrieving your password	53
Resetting the projector	54
Transporting your interactive whiteboard system	54
Appendix A: Remotely managing your system through a network interface	55
Webpage management	55
Accessing webpage management	56

CONTENTS

Home	56
Control panel	56
Control panel II	59
USB Control settings	59
Network settings	60
Email alerts	61
Password settings	62
Simple Network Management Protocol (SNMP)	62
Appendix B: Remotely managing your system through an RS-232 serial interface	63
Connecting your room control system to the SMART UF 70 projector	64
Pin configuration on the projector's RS-232 connector	64
Serial interface settings	64
Projector programming commands	66
Power state controls	66
Source Application Selection	66
Command/response definitions	67
Field definitions	67
Video Control	68
Command/response definitions	68
Field definitions	70
Audio Control	73
Command/response definitions	73
Field definitions	74
Command/response definitions	76
Field definitions	76
Command/response definitions	78

CONTENTS

Field definitions	80
Command/response definitions	85
Field Definitions	85
Command/response definitions	88
Field definitions	88
Command/response definitions	90
Appendix C: Disabling user USB access	93
Appendix D: Remote control code definitions	95
Appendix E: Hardware environmental compliance	97
Waste Electrical and Electronic Equipment and Battery regulations (WEEE and Battery Directives)	97
Batteries	97
Perchlorate material	97
Mercury	97
More information	97
Index	99

Chapter 1

About your interactive whiteboard system

SMART Board 480i6 interactive whiteboard system features	2
SMART Board 600 series interactive whiteboard	2
SMART UF70 or SMART UF70w projector	3
Extended Control Panel (ECP)	3
Included accessories	4
Remote control	4
Pens	4
Eraser	5
VGA connection kit	5

Your SMART Board 480i6 interactive whiteboard system combines the following components:

- SMART Board 600 series interactive whiteboard
- Wall-mounted, short-throw SMART UF70 or SMART UF70w projector
- Accessories and optional equipment


This chapter describes the features of your interactive whiteboard and provides information about product parts and accessories.

SMART Board 480i6 interactive whiteboard system features

Your SMART Board 480i6 interactive whiteboard system uses the short-throw, high-offset SMART UF70 or SMART UF70w projector. The throw distance of the SMART UF70 or SMART UF70w projectors is half that of the SMART UF65 projector, resulting in a shorter boom and reduced shadows on the projected image.

When the projector displays an image from your computer on the touch-sensitive interactive whiteboard, you can do everything that you can do at your computer—open and close applications, scroll through files, conference with others, create new documents or edit existing ones, visit websites, play video clips and more—by touching the screen. This projector also supports video and audio connections from a variety of devices, including DVD/Blu-ray™ players, VCRs, document cameras and digital cameras, and can project media from these sources onto the interactive screen.

When you use SMART software with your SMART Board 480i6 interactive whiteboard system, you can write or draw over the projected computer image in digital ink using a pen tray pen or your finger, and then save these notes to a .notebook file or directly into any Ink Aware application.

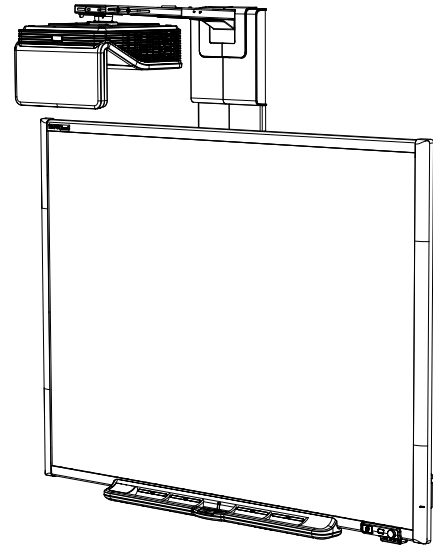


SMART Board 600 series interactive whiteboard

Your SMART Board 600 series interactive whiteboard has many features, including a resistive touch screen and a pen tray.

Other features of your interactive whiteboard include the following:

- A pen tray that automatically detects when you pick up a pen tray pen or the eraser
- Pen tray buttons that activate the on-screen keyboard, right-click, Orientation and Help functions
- A durable tear-resistant surface optimised for projection and easily cleaned with whiteboard cleaner
- A security cable lock feature that enables you to lock your interactive whiteboard to help safeguard it from theft

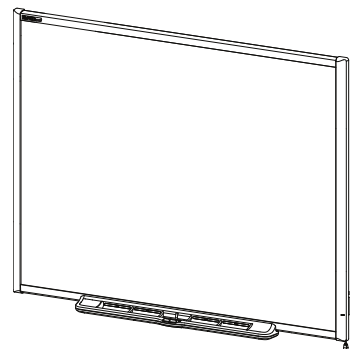


CHAPTER 1

About your interactive whiteboard system

For more information about your SMART Board interactive whiteboard, see the *SMART Board 600 and D600 series interactive whiteboard installation and user's guide* (smarttech.com/kb/001414).

SMART UF70 or SMART UF70w projector

The SMART UF70 or SMART UF70w projector system includes a short-throw projector for use with SMART Board interactive whiteboards and a sturdy support system suitable for many different environments.

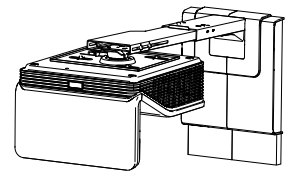

Other features of your projector system include:

- A wall-mounted, high-offset projector engine that uses DLP® technology by Texas Instruments™, providing BrilliantColor™ performance and Gamma 2.2 correction with SMART Presentation, Bright Room, Dark Room, sRGB and User modes
- PAL, PAL-N, PAL-M, SECAM, NTSC, and NTSC 4.43 video system compatibility
- HDMI, Composite, and VESA® RGB video inputs (not included).
- WXGA, QVGA, VGA, SVGA, XGA, SXGA, SXGA+ and UXGA video format compatibility
- Native 1024 × 768 resolution (SMART UF70 projector)

OR


Native 1280 × 800 resolution (SMART UF70w projector in 16:10 aspect ratio mode)

- Remote management via a serial RS-232 interface, webpage or SNMP
- An alert broadcast feature that enables administrators to send notification messages to network-connected projector systems for immediate on-screen display
- Protected cable routing through a cable cover that limits tampering and clutter
- A secure mounting and installation system that includes the following:
 - An optional projector padlock ring to prevent removal of the projector from the boom
 - Accessory mounting hardware for solid masonry or framed wall installations kit part number 1007416
 - Templates and instructions for positioning the system safely

Projector information

Extended Control Panel (ECP)

Your projector system's ECP attaches to the bottom frame of your interactive whiteboard. The ECP features controls for power, source selection and volume adjustment, as well as an integrated USB hub that enables you to switch seamlessly between two connected computers.

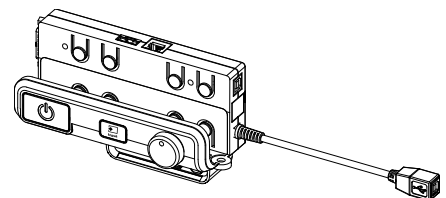

CHAPTER 1

About your interactive whiteboard system

Connection ports for your source inputs include:

 
- One USB A port on the front of the ECP for USB drives
- Two USB A ports behind the interactive whiteboard
- Two RCA jacks on the front of the ECP for dual-channel audio input
- One RCA jack on the front of the ECP for composite video input
- One captive USB B port for your primary computer
- One DB15M port behind the interactive whiteboard for connecting to the projector
- One USB B port behind the interactive whiteboard for connecting a secondary computer

Included accessories

The following accessories are included with your interactive whiteboard system.

Remote control

The remote control enables you to control the system and set up your projector. Use the remote control to access menu options, system information and input selection options.



Pens

The pens have rubberised grip areas and are coloured to match four colours of digital ink: black, red, green and blue.



You can use dry-wipe markers to replace the pens included, as long as they're a similar shape, don't scratch or mark your interactive whiteboard surface and reflect infrared light. If the substitute doesn't reflect infrared light, the pen tray sensors might not detect the presence of the pen.



NOTE

Some of SMART's older pens aren't designed to reflect infrared light and the pen tray sensors might not detect them reliably.



TIP

Wrap light-coloured tape around a substitute pen to improve the reflection of infrared light and help with tool detection.

CHAPTER 1

About your interactive whiteboard system


Eraser

The eraser resembles a rectangular blackboard eraser. You can use a substitute object, as long as it has a similar shape, reflects infrared light and doesn't scratch or mark the interactive whiteboard surface.



VGA connection kit

The VGA connection kit allows you to connect a laptop to your interactive whiteboard system using a VGA cable. The end of the VGA connection kit can be attached to either side of the interactive whiteboard or to a wall in a convenient location.

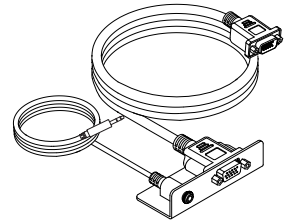

You can add a variety of accessories to your interactive whiteboard to best meet your specific needs. Purchase these items from your authorised SMART reseller.

For more information on accessories, go to smarttech.com/accessories.

Chapter 2

Installing your interactive whiteboard system

Choosing a location	7
Choosing a height	8
Securing your interactive whiteboard system	8
Locking the pen tray to your interactive whiteboard	8
Securing the projector to the boom	8
Routing the cables	8
Installing SMART software	9
Changing your projector's aspect ratio for use with your SMART Board 690 interactive whiteboard	9

Consult the SMART Board 480i6 interactive whiteboard system installation document included with your product for instructions on how to install and secure your system.



IMPORTANT

Use the *SMART Board 660i5, 680i5, 685i5 and 690i5 interactive whiteboard system installation guide* (smarttech.com/kb/154547) to install your interactive whiteboard, projector and ECP.

This chapter provides additional considerations and details for installing your interactive whiteboard system.

Choosing a location

Choose a location for your interactive whiteboard system that's far from bright light sources, such as windows and strong overhead lighting. Bright light sources can cause distracting shadows on your interactive whiteboard and can reduce the contrast of the projected image.

Select a wall with a flat, regular surface and sufficient clearance to accommodate your interactive whiteboard system. Install the projector and your interactive whiteboard on the same flat surface. For best presentation alignment, mount your interactive whiteboard system in a location that's central to your audience's viewing direction.

For mobile or adjustable installation options, contact your authorised SMART reseller.

Choosing a height

SMART includes a mounting template with each interactive whiteboard system. If you lose this template, contact your authorised SMART reseller. Using this template ensures that you can do the following:

- Mount the projector at a safe height for head space clearance, whilst maintaining enough space for airflow and installation access above the unit.
- Position the projector at the correct height above your interactive whiteboard to align the projected image with the touch screen.

Dimensions on the template recommend a distance from the floor suitable for adults of average height. You should consider the general height of your user community when you choose a location for your interactive whiteboard.

Securing your interactive whiteboard system

This section explains how to secure the different components of your interactive whiteboard system.

Locking the pen tray to your interactive whiteboard

To learn how to lock the pen tray to your interactive whiteboard, see the *SMART Board 600 and D600 series interactive whiteboard installation and user's guide* (smarttech.com/kb/001414).

Securing the projector to the boom

To learn how to secure the SMART UF70 or SMART UF70w projector to the boom, see the *SMART Board 660i6, 680i6, 685i6 or 690i6 interactive whiteboard system installation guide included* (smarttech.com/kb/154547).


Routing the cables

When connecting cables from your SMART UF70 projector to your interactive whiteboard system, make sure that all cables pass along the top of the interactive whiteboard wall-mounting bracket and then down the side of the interactive whiteboard.

When connecting cables from a SMART UF70w projector to the interactive whiteboard, make sure that all cables pass between the two interactive whiteboard wall-mounting brackets. Space your wall-mounting brackets 10.2cm (4") apart to provide full support for the weight of your interactive whiteboard.


CHAPTER 2

Installing your interactive whiteboard system

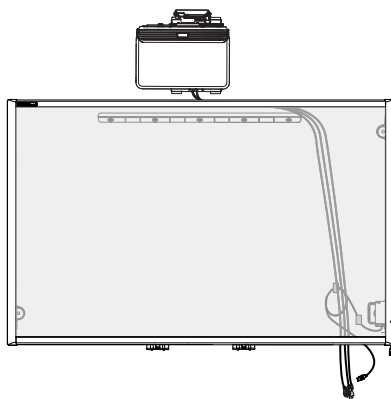

Cable routing for SMART Board 660 and 680 interactive whiteboards

Cable routing for SMART Board 880 interactive whiteboards

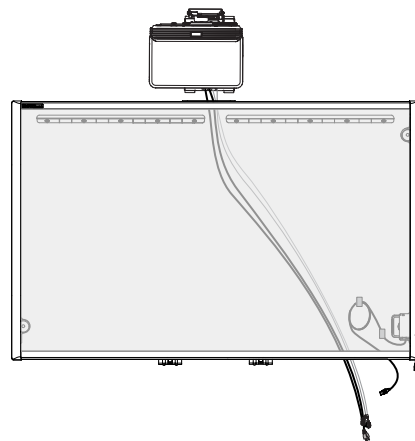

Cable routing for SMART Board 685 and 690 interactive whiteboards

Cable routing for SMART Board 885 interactive whiteboards

IMPORTANT

Do not connect the power cable to a power socket until you have connected all the cables to the projector and ECP.

Installing SMART software

You must install SMART software, such as SMART Meeting Pro™ software or SMART Notebook™ collaborative learning software on the computer connected to your interactive whiteboard system to access all of its features.

Download SMART software from smarttech.com/software. These webpages list the minimum hardware requirements for each software version. If SMART software is already installed on your computer, take this opportunity to upgrade your software to ensure compatibility.

Changing your projector's aspect ratio for use with your SMART Board 690 interactive whiteboard

Before you align the projected image on your SMART Board 690 interactive whiteboard, you must change the native aspect ratio on your SMART UF70w projector to 16:9. You don't need to perform this step with any other model of interactive whiteboard. The procedure that you use to change the native aspect ratio depends on the DDP firmware version of your projector.

CHAPTER 2

Installing your interactive whiteboard system

To determine the DDP firmware version of your projector

1. Turn on your projector.
2. Press **Menu** on the remote control and then press **Right** five times.
3. Record the DDP firmware version in the *Firmware Version* row.

To change the aspect ratio of a projector with DDP firmware version 0.0.1.7

1. Using the remote control, press the following buttons quickly to access the service menu:
Down, Up, Up, Left, Up.
2. Scroll to *WXGA_720P_MODE* and then press **Right** to select **16:9**.
3. Press **Menu** on the remote control.

To change the aspect ratio of a projector with DDP firmware version 0.0.2.1 or later

1. Press **Menu** on the remote control and then press **Right** twice.
2. Scroll to *Native DLP Resolution* and then press **Right** to select **16:9**.
3. Press **Menu** on the remote control.

Chapter 3

Using your interactive whiteboard system

Using your projector	11
Using your remote control	11
Replacing the remote control battery	12
Using the remote control buttons	13
Adjusting projector settings	14
Focusing the image	20
Adjusting the image	21
Projector connection diagram	21
Using your interactive whiteboard	23
Using the Extended Control Panel (ECP)	23

This chapter describes the basic operation of your interactive whiteboard system and explains how to set up your remote control, retrieve system information, access the projector's image adjustment options and integrate your interactive whiteboard system with peripheral devices.

Using your projector

This section explains how to use your projector and its included remote control.

Using your remote control

The projector remote control enables you to access on-screen projector menus and change projector settings.

Replacing the remote control battery


Follow this procedure to replace the remote control battery.

WARNING

- Reduce the risk associated with a leaking battery in the projector's remote control by following these practices:
 - Use only the specified CR2025 coin-cell battery.
 - Remove the battery when the remote control is unused for an extended period.
 - Do not heat, disassemble, short or recharge the battery, or expose it to fire or high temperatures.
 - Avoid eye and skin contact with the battery if it has a leak.
- Dispose of the exhausted battery and product components in accordance with applicable regulations.

To replace the remote control battery

1. Hold down the side release on the left side of the battery holder and pull the battery holder completely out of the remote control.

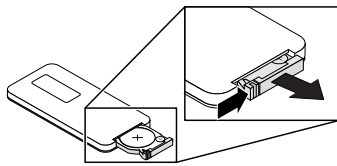

2. Remove the old battery from the battery holder and replace it with a CR2025 coin-cell battery.




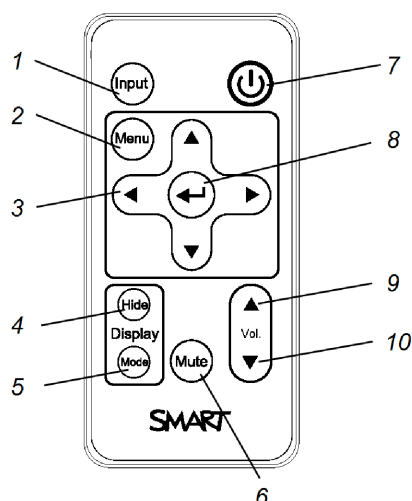
IMPORTANT


Align the battery's positive (+) and negative (–) terminals with the correct signs on the battery holder.

3. Insert the battery holder into the remote control.

Using the remote control buttons

The projector remote control enables you to access on-screen menus and change projector settings. Use the **Power**  button on the remote control or ECP to put the projector into Standby mode or to turn it on. You can also use the **Input** button on the remote control or ECP to switch sources on the projector.



Number	Function	Description
1	Input	Select a video and audio input source on the projector and the associated USB input source on the ECP.
2	Menu	Show or hide the projector menus.
3	◀ (Left), ▶ (Right), ▲ (Up) and ▼ (Down) arrows	Change the menu selections and adjustments.
4	Hide	Freeze, hide or display the image: <ul style="list-style-type: none"> • Press once to freeze the image. For example, you can display a question on the screen whilst you check your email. • Press again to hide the image, that is, to display a black screen. • Press again to return to the live image.
5	Mode	Select a display mode.
6	Mute	Mute audio amplification.
7	 (Power)	Turn on the projector or put it into Standby mode.
8	↵ (Enter)	Accept the selected mode or option.
9	▲ (Volume Up)	Increase audio amplification volume.
10	▼ (Volume Down)	Decrease audio amplification volume.



NOTE

The **Mute**, **Volume Up** and **Volume Down** buttons work only if there is an audio source connected to the projector for the currently selected video input source.

Adjusting projector settings

The remote control's Menu button enables you to access the on-screen display to adjust the projector settings.




IMPORTANT

Keep your remote control in a safe place because there is no other way to access menu options.

Setting	Use	Notes
Image Adjustment menu		
Display Mode	Indicates the projector's display output (SMART Presentation , Bright Room , Dark Room , sRGB and User).	The default is SMART Presentation .
Brightness	Adjusts projector brightness from 0 to 100.	The default is 50.
Contrast	Adjusts the difference between the lightest and darkest parts of the image from 0 to 100.	The default is 50.
Frequency	Adjusts the display data frequency of the projected image from -5 to 5 to match the frequency of your computer's graphics card.	The default is 0. This setting applies to VGA inputs only.
Tracking	Synchronises your projector's display timing with your computer's graphics card from 0 to 63.	This setting applies to VGA inputs only.
H-Position	Moves the horizontal position of the source video left or right from 0 to 100 (relative to the projected image).	Don't adjust this setting unless you're advised to by SMART Support. Apply this setting only after you make all boom adjustments. This setting applies to VGA inputs only and is useful in situations where the source video is cut off.


CHAPTER 3

Using your interactive whiteboard system

Setting	Use	Notes
V-Position	Moves the vertical position of the source video up or down from -5 to 5 (relative to the projected image).	Don't adjust this setting unless you're advised to by SMART Support. Apply this setting only after you make all boom adjustments. This setting applies to VGA inputs only and is useful in situations where the source video is cut off.
White Peaking	Adjusts the image colour brightness from 0 to 10 whilst providing more vibrant white shades.	A value closer to 0 creates a natural image and a value closer to 10 enhances brightness. The default is 10.
Degamma	Adjusts the colour performance of the display from 1 to 3.	The default is 2.
Colour	Adjusts the Red, Green, Blue, Cyan, Magenta and Yellow colours on the projector from 0 to 100 to provide custom colour and luminance output.	Each colour has a default value of 100. Adjustments to the colour settings register under the User mode.
 Audio menu		
Volume		
Mute	Mutes the projector's audio output.	The default is off. If you mute the projector's audio output and then increase or decrease the volume, the volume is restored automatically. You can prevent this from happening by disabling the volume control.
Disable Volume Control	Disables the projector's volume control and the ECP's volume control knob.	
Line out	Enables/disables the line out.	
Microphone	Enables/disables the microphone	
Speaker	Enables/disables the speaker	


CHAPTER 3

Using your interactive whiteboard system

Setting	Use	Notes
 Projector Functions menu		
Auto Signal Detect	Enables or disables signal searching of input connectors.	The default is off. Select On to have the projector continuously switch inputs until it finds an active video source. Select Off to maintain signal detection in one input.
Lamp Reminder	Turns the lamp replacement reminder on or off.	This reminder appears 100 hours before the recommended lamp replacement.
Lamp Mode	Adjusts lamp brightness to Standard or Economy .	Standard displays a high-quality, bright image. Economy increases the lamp life by decreasing the brightness of the image.
Auto Power Off (minutes)	Sets the length of the auto power-off countdown timer between 1 and 240 minutes.	The default is 120 minutes. The timer begins to count down when the projector no longer receives a video signal. The timer finishes when the projector enters Standby mode. Select 0 to turn off the timer.
Zoom	Adjusts the zoom to the centre of the image in or out from 0 to 30.	The default is 0. Zooming in cuts off the outer edges of the source video.
Keystone	Adjustment to the size of the top and bottom edge	Ensure that the top and bottom edges of the image are horizontal before you position the left and right edges of the image relative to your interactive whiteboard.
USB 1 source	Enables touch for the selected video source VGA out, USB 2 will be disabled by associating the video source with the room computer USB port (USB1) on the ECP.	The default is VGA out. When the user switches to the video source the interactive whiteboard recognises touch from the device connected to the room computer USB port on the ECP. Selecting Disabled disables the room computer USB port on the ECP.
USB 2 source	Enables touch for the selected video source HDMI, USB 1 will be disabled by associating the video source with the guest computer USB port (USB2) on the ECP.	The default is HDMI. When the user switches to the video source the interactive whiteboard recognises touch from the device connected to the guest computer USB port on the ECP. Selecting Disabled disables the room computer USB port on the ECP.

CHAPTER 3

Using your interactive whiteboard system

Setting	Use	Notes
Projector ID	Displays the projector's unique ID number (from 0 to 99) within your organisation's network.	You can refer to or change this number when using the network remote management feature (see <i>Remotely managing your system through a network interface</i> on page 55).
Aspect Ratio	Adjusts the image output to Fill Screen , Match Input or 16:9 .	<p>The default is Fill Screen.</p> <p>Fill Screen produces an image that fills the entire screen by stretching and scaling the source video to match the projector's native resolution and aspect ratio.</p> <p>Match Input displays the source video in its native resolution and aspect ratio. As a result, unused space could appear along the top and bottom edges of the screen (letterbox format) or along the left and right edges of the screen (pillarbox format).</p> <p>See <i>Video format compatibility</i> on page 27 for descriptions of each mode.</p>
Startup Screen	Selects the type of startup screen (SMART , Capture User Startup Screen , Preview Startup Screen), or Image Alignment Screen.	<p>This screen displays when the projector lamp is starting and a video source signal isn't displayed.</p> <p>SMART displays the default SMART logo on a blue background.</p> <p>Capture User Startup Screen closes the on-screen display menu and captures the entire projected image. The captured image is displayed the next time the on-screen display opens. (The capture can take up to one minute, depending on the complexity of the background graphic.)</p> <p>Preview Startup Screen enables you to preview the default or captured startup screen.</p> <p>Image Alignment Screen enables you to adjust the projected image size, shape and location.</p>
Image Alignment Screen	Enables you to adjust the projected image size, shape and location.	The image alignment screen appears the first time you start your projector. However, you can access it from the startup screen menu any time. Press MENU or ENTER to close it.
 Network menu		
Network and VGA Out	Activates the projector's RJ45 connector and network features.	
Status	Displays the current network status (Connected , Disconnected or Off).	The default is off.



CHAPTER 3

Using your interactive whiteboard system

Setting	Use	Notes
DHCP	Displays the status of the network's Dynamic Host Configuration Protocol (DHCP) as On or Off .	The default is on. On enables a DHCP server on the network to automatically assign an IP address to the projector. Off enables an administrator to assign an IP address manually.
Password Reminder	Emails the network password to the predefined email recipient.	See <i>Webpage management</i> on page 55 to set up a destination email address.
IP Address	Displays the projector's current IP address in values between 0.0.0.0 and 255.255.255.255.	To change the projector's IP address, use the RS-232 connector (see <i>Command/response definitions</i> on page 76) or use a DHCP server to assign a dynamic IP address and then set a static IP address using the network remote management feature (see <i>Remotely managing your system through a network interface</i> on page 55).
Subnet Mask	Displays the projector's subnet mask number in values between 0.0.0.0 and 255.255.255.255.	
Gateway	Displays the projector's default network gateway in values between 0.0.0.0 and 255.255.255.255.	
DNS	Displays the projector's primary domain name server (DNS) IP address in values between 0.0.0.0 and 255.255.255.255.	
MAC Address	Displays the projector's MAC address in xx-xx-xx-xx-xx-xx format.	
Group Name	Displays the projector's workgroup name as set by an administrator (maximum 12 characters).	You can set the projector's workgroup name using the remote management features (see <i>Remotely managing your system through a network interface</i> on page 55 and <i>Remotely managing your system through an RS-232 serial interface</i> on page 63).
Projector Name	Displays the projector's name as set by an administrator (maximum 12 characters).	You can set the projector's name using the remote management features (see <i>Remotely managing your system through a network interface</i> on page 55 and <i>Remotely managing your system through an RS-232 serial interface</i> on page 63).

CHAPTER 3

Using your interactive whiteboard system

Setting	Use	Notes
Location	Displays the projector's location as set by an administrator (maximum 16 characters).	You can set the projector's location using the remote management features (see <i>Remotely managing your system through a network interface</i> on page 55 and <i>Remotely managing your system through an RS-232 serial interface</i> on page 63).
Contact	Displays the contact name or number for projector support as set by an administrator (maximum 16 characters).	You can set the contact name or number using the remote management features (see <i>Remotely managing your system through a network interface</i> on page 55 and <i>Remotely managing your system through an RS-232 serial interface</i> on page 63).
 Language menu		
Language	Selects language preference.	Projector menu support is available in English (default), Chinese (Simplified), Chinese (Traditional), Czech, Danish, Dutch, Finnish, French, German, Greek, Italian, Japanese, Korean, Norwegian, Polish, Portuguese (Brazil), Portuguese (Portugal), Russian, Spanish and Swedish.
 Information menu		
Lamp Hours	Displays the current number of lamp usage hours from 0 to 4000 hours from when it was last reset.	Always reset the lamp hours after you replace a lamp, because lamp service reminders are based on the current hours of use. See <i>Resetting the lamp hours</i> on page 40 for details on the lamp hours reset procedure.
Input	Displays the currently displayed video input source (VGA-1, VGA-2, HDMI or None).	
Resolution	Displays the projector's most recently detected video source signal resolution and refresh rate.	If there is no current video input source signal, this setting displays the last known source signal image resolution and refresh rate.
Firmware Version	Displays the projector's digital display processor (DDP) firmware version in x.x.x.x format.	
MPU Version	Displays the projector microprocessor unit (MPU) firmware version in x.x.x.x format.	

CHAPTER 3

Using your interactive whiteboard system


Setting	Use	Notes
Network Version	Displays the projector's network communications processor firmware version in x.x.x.x format.	If you haven't enabled the Network and VGA Out setting, this setting is unable to display the projector's network communications processor firmware version and displays 0.0.0.0 instead.
Model Number	Displays the projector's model number.	
Serial Number	Displays the projector's serial number.	

Focusing the image

Use the focus lever located on the projector lens to focus the projected image.

To focus the image

Rotate the focus ring clockwise or anti-clockwise until the image is in focus.

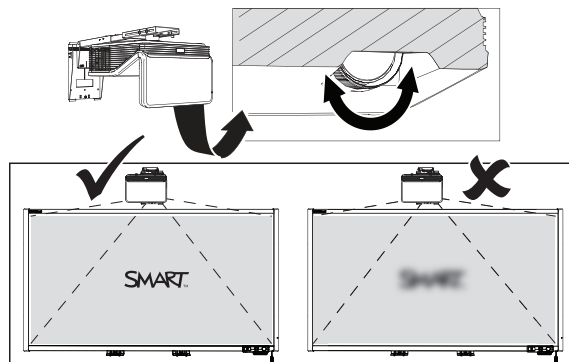

Adjusting the image

Refer to these notes when adjusting the projected image as described in the *SMART Board 660i6, 680i6, 685i6 and 690i6 interactive whiteboard system installation guide* (smarttech.com/kb/170498).

- Whilst adjusting the projected image size, shape and location, use the projector's default background so that you can see the full projected image clearly. Don't use other images, which might be cropped or scaled by the projector and could result in a misleading projected image size, shape and location.
- Use the mechanical adjustments described in the installation document to make all physical image adjustments. Don't use the projector's on-screen menu options during the projector alignment process.
- Be aware that as you tilt the projector up or lower its mounting boom to raise the image, the entire projected image increases or decreases in size, especially at the bottom of the projected image.
- When adjusting keystone (tilt), ensure that the top and bottom edges of the image are horizontal before you position the left and right edges of the image relative to your interactive whiteboard.
- When you move the projector forward or backward on the boom to make the image larger or smaller, you might need to tilt or turn the projector slightly to keep the image square. Loosen the lever slightly to aid in this adjustment.
- To fine-tune the image, you might need to repeat all steps described in the installation document in smaller increments.


Projector connection diagram

You can connect a variety of peripheral devices to your projector, including DVD/Blu-ray players, VCRs, document cameras, digital cameras and high-definition sources, as well as peripheral device outputs, such as a secondary projector or a flat-panel display and powered speakers.



NOTE

You might need to purchase third-party adapters to connect certain peripheral devices.

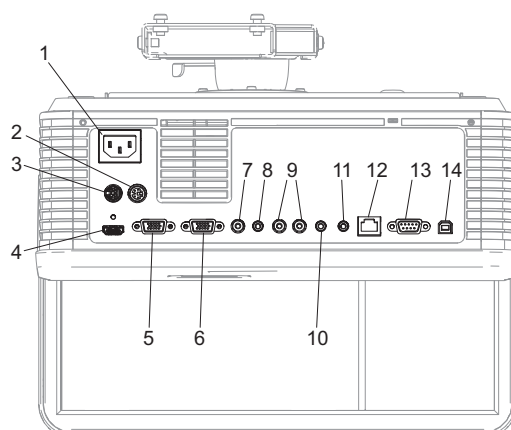

CHAPTER 3

Using your interactive whiteboard system

No.	Connector	Connect to:
1	Power	Mains power supply
2	7-pin mini-DIN	ECP cable harness
3	4-pin power mini-DIN 5V/2A output	ECP cable harness
4	HDMI input	High-definition video and audio source (not included)
5	DB15F RGB video input (VGA 1)	Primary computer (not included)
6	DB15F RGB video output (VGA Out)	Secondary display (not included)
7	RCA Composite video input	ECP cable harness
8	3.5 mm phone jack audio input (×2)	Audio sources associated with primary and secondary computers
9	Left and right RCA audio input	through RCA connector pod
10	3.5mm phone jack audio output	Speakers (not included)
11	3.5 mm phone jack microphone	Microphone (not included)
12	RJ45	Network (for webpage management and SNMP access)
13	DB9 RS-232F	Room control system or other terminal device (not included)
14	USB B	Computer (for service access only)



NOTES

- To connect your interactive whiteboard, see the *SMART Board 660i6, 680i6, 685i6 and 690i6 interactive whiteboard system installation guide* (smarttech.com/kb/170498).
- To connect accessories to your interactive whiteboard, refer to the documents included with the accessories and consult the SMART Support website (smarttech.com/support) for additional information.

Using your interactive whiteboard

Refer to the *SMART Board 600 and D600 series interactive whiteboard installation and user's guide* (smarttech.com/kb/001414) for more information on using your interactive whiteboard.


When you connect your SMART Board interactive whiteboard to a computer with SMART software, you can access the full capabilities of your interactive whiteboard.

For more information on this software, press the **Help** button on your interactive whiteboard pen tray.

For additional resources, go to smarttech.com, click the flag icon to the right of the SMART logo and then select your country and language. In the Support section of this website, you'll find up-to-date, product-specific information, including setup instructions and specifications.

The SMART training website (smarttech.com/training) includes an extensive library of training resources that you can refer to when first learning to set up or use your interactive whiteboard system.

Using the Extended Control Panel (ECP)

The ECP gives you control of the basic operations of your interactive whiteboard system. Additionally, you can connect peripheral devices directly to the ECP, as described in *Connecting peripheral sources and outputs* on page 33. Press the **Power**  button on the ECP or remote control to put the projector system into Standby mode or turn it on. Press the **Input** button on the ECP or remote control to switch sources on the projector.




IMPORTANT



- Keep your remote control in a safe place because there is no other way to access menu options.
- Do not disconnect cables from the ECP to connect peripheral devices because you could disconnect controls for your interactive whiteboard.

CHAPTER 3

Using your interactive whiteboard system

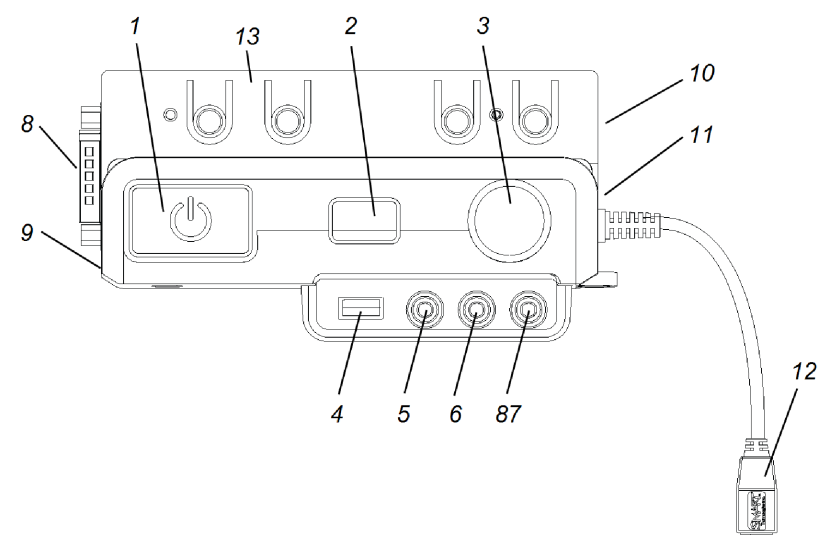
The following diagram and table describe the components of the ECP:



Number	Function
Front	
1	Power⏻ and ECP status indicator light
2	Input selection
3	Volume control
4	USB A port (for USB drives)
5	RCA jack composite video input (for peripheral devices such as a DVD/Blu-ray players)
6	RCA audio jack right input
7	RCA audio jack left input
Left side	
8	DB15 socket (ECP cable harness only)
9	USB A port (for any USB peripheral, up to 500mA)
Right side	
10	USB B port (for a secondary computer such as a laptop) 
<div> NOTE This USB port is active only when you select the associated video source as the projector input source. The associated video source is VGA2 by default, but you can change it using the projector menu.</div>	
11	USB A port (for SMART Board interactive whiteboard only)

CHAPTER 3

Using your interactive whiteboard system

Number	Function
12	USB B port (for your primary computer) <div> NOTE This USB port is active only when you select the associated video source as the projector input source. The associated video source is VGA1 by default, but you can change it using the projector menu.</div>
Top	
13	RJ11 6-conductor port (for SMART Hub™ SE collaboration platform control)



TIP

If your computer has an HDMI output, you can connect a USB cable from your computer to either of the USB B ports on the ECP and an HDMI cable from your computer to the HDMI connector on the projector. Associate the HDMI source with the appropriate USB port (see *Adjusting projector settings* on page 14). Press the **Input** button on the ECP to switch to the HDMI input.

Chapter 4

Integrating other devices

Video format compatibility	27
Native video format	27
Video format compatibility	28
SMART UF70 projector	28
SMART UF70w projector	29
HD and SD signal format compatibility	31
SMART UF70 projector	31
SMART UF70w projector	31
Video system signal compatibility	32
SMART UF70 projector	32
SMART UF70w projector	32
Connecting peripheral sources and outputs	33

This appendix provides information on integrating your SMART Board 480i6 interactive whiteboard system with peripheral devices.

Video format compatibility

Your projector has a native video format and various video format compatibility modes. You can change image appearances for certain formats and compatibilities.

Native video format

The following table lists the native VESA RGB video formats for the projector.

Projector	Resolution	Mode	Aspect ratio	Refresh rate (Hz)	Horizontal frequency (kHz)	Pixel clock (MHz)
SMART UF70	1024 × 768	XGA	4:3	60	48	63.5
SMART UF70w (16:10 aspect ratio mode)	1280 × 800	WXGA	16:10	60	48	83.5
SMART UF70w (16:9 aspect ratio mode)	1280 × 720	WXGA	16:9	60	48	83.5

Video format compatibility

The following tables list the projectors' compatible VESA RGB video formats by resolution, which the projector adjusts automatically when you use the aspect ratio commands described in *Adjusting projector settings* on page 14.

SMART UF70 projector

Resolution	Mode	Aspect ratio	Refresh rate (Hz)	Match Input appearance
720 × 400	720×400_85	1.8:1	85.039	Letterbox
640 × 480	VGA 60	4:3	59.94	Full screen
640 × 480	VGA 72	4:3	72.809	Full screen
640 × 480	VGA 75	4:3	75	Full screen
640 × 480	VGA 85	4:3	85.008	Full screen
800 × 600	SVGA 56	4:3	56.25	Full screen
800 × 600	SVGA 60	4:3	60.317	Full screen
800 × 600	SVGA 72	4:3	72.188	Full screen
800 × 600	SVGA 75	4:3	75	Full screen
800 × 600	SVGA 85	4:3	85.061	Full screen
832 × 624	MAC 16"	4:3	74.55	Full screen
1024 × 768	XGA 60	4:3	60.004	Full screen
1024 × 768	XGA 70	4:3	70.069	Full screen
1024 × 768	XGA 75	4:3	75.029	Full screen
1024 × 768	XGA 85	4:3	84.997	Full screen
1024 × 768	MAC 19"	4:3	74.7	Full screen
1152 × 864	SXGA1 75	4:3	75	Full screen
1280 × 720	HD 720	16:9	60	Letterbox
1280 × 768	SXGA1 75	1.67:1	60	Letterbox
1280 × 800	WXGA	16:10	60	Letterbox
1280 × 960	Quad VGA 60	4:3	60	Full screen
1280 × 960	Quad VGA 85	4:3	85.002	Full screen
1280 × 1024	SXGA3 60	5:4	60.02	Letterbox
1280 × 1024	SXGA3 75	5:4	75.025	Letterbox
1280 × 1024	SXGA3 85	5:4	85.024	Letterbox
1360 × 765	1.04M9	16:9	59.799	Letterbox

CHAPTER 4

Integrating other devices

Resolution	Mode	Aspect ratio	Refresh rate (Hz)	Match Input appearance
1600 x 900	1.44M9	16:9	59.946	Letterbox
1600 x 1200	UXGA	4:3	60	Full screen
1680 x 1050	1680x1050 50	16:10	49.974	Letterbox
1680 x 1050	1680x1050 50	16:10	59.954	Letterbox
1920 x 1080	HD 1080	16:9	60	Letterbox

SMART UF70w projector

Resolution	Mode	Aspect ratio	Refresh rate (Hz)	Match Input appearance (16:10 aspect ratio mode)	Match Input appearance (16:9 aspect ratio mode)
720 x 400	720x400_85	9:5	85.039	Letterbox	Letterbox
640 x 480	VGA 60	4:3	59.94	Pillarbox	Pillarbox
800 x 600	VGA 72	4:3	72.809	Pillarbox	Pillarbox
800 x 600	VGA 75	4:3	75	Pillarbox	Pillarbox
800 x 600	VGA 85	4:3	85.008	Pillarbox	Pillarbox
800 x 600	SVGA 56	4:3	56.25	Pillarbox	Pillarbox
800 x 600	SVGA 60	4:3	60.317	Pillarbox	Pillarbox
800 x 600	SVGA 72	4:3	72.188	Pillarbox	Pillarbox
800 x 600	SVGA 75	4:3	75	Pillarbox	Pillarbox
800 x 600	SVGA 85	4:3	85.061	Pillarbox	Pillarbox
832 x 624	MAC 16"	4:3	74.55	Pillarbox	Pillarbox
1024 x 768	XGA 60	4:3	60.004	Pillarbox	Pillarbox
1024 x 768	XGA 70	4:3	70.069	Pillarbox	Pillarbox
1024 x 768	XGA 75	4:3	75.029	Pillarbox	Pillarbox
1024 x 768	XGA 85	4:3	84.997	Pillarbox	Pillarbox
1024 x 768	MAC 19"	4:3	74.7	Pillarbox	Pillarbox
1152 x 864	SXGA 75	4:3	75	Pillarbox	Pillarbox
1280 x 768	WXGA 60	1.67:1	60	Letterbox	Pillarbox
1280 x 960	Quad VGA 60	4:3	60	Pillarbox	Pillarbox
1280 x 960	Quad VGA 85	4:3	85.002	Pillarbox	Pillarbox
1280 x 960	SXGA3 60	5:4	60.02	Pillarbox	Pillarbox

CHAPTER 4

Integrating other devices

Resolution	Mode	Aspect ratio	Refresh rate (Hz)	Match Input appearance (16:10 aspect ratio mode)	Match Input appearance (16:9 aspect ratio mode)
1280 × 1024	SXGA3 75	5:4	75.025	Pillarbox	Pillarbox
1600 × 1200	SXGA+	4:3	59.978	Pillarbox	Pillarbox
1600 × 1200	UXGA_60	4:3	60	Pillarbox	Pillarbox

HD and SD signal format compatibility

The following tables list the projectors' high definition (HD) and standard definition (SD) format signal compatibility, which the projector adjusts automatically when you use the aspect ratio commands described in *Adjusting projector settings* on page 14.

SMART UF70 projector

Signal format	Aspect ratio	Horizontal frequency (kHz)	Vertical frequency (Hz)	Match Input appearance
480i (DVD player) (640 × 480)	4:3	15.73	59.94	Full screen
567i (DVD player) (720 × 576)	5:4	15.63	50	Letterbox
720p	16:9	44.96	59.94	Letterbox
720p	16:9	35	50	Letterbox
1080i	16:9	33.7	59.94	Letterbox
1080i	16:9	28.1	50	Letterbox

SMART UF70w projector

Signal format	Aspect ratio	Horizontal frequency (kHz)	Vertical frequency (Hz)	Match Input appearance (16:10 aspect ratio mode)	Match Input appearance (16:9 aspect ratio mode)
480i (525i)	4:3	15.73	59.94	Pillarbox	Pillarbox
480p (525p)	4:3	31.47	59.94	Pillarbox	Pillarbox
576i (625i)	5:4	15.63	50	Pillarbox	Pillarbox
576p (625p)	5:4	31.25	50	Pillarbox	Pillarbox
720p (750p)	16:9	45	59.94	Letterbox	Full screen
720p (750p)	16:9	37.5	50	Letterbox	Full screen
1080i (1125i)	16:9	33.75	59.94	Letterbox	Full screen
1080i (1125i)	16:9	28.13	50	Letterbox	Full screen
1080p (1125p)	16:9	67.5	59.94	Letterbox	Full screen
1080p (1125p)	16:9	56.25	50	Letterbox	Full screen



NOTE

Your projector is HD Ready. Its native resolution supports a pixel-perfect display of 720p source content. However, because the projector compresses 1080p source content to fit its native resolution, it doesn't support a pixel-perfect display of 1080p source content.

Video system signal compatibility

The following tables list the projectors' video system signal compatibility, particularly for signals delivered over S-Video and Composite video connectors, which the projector adjusts automatically when you use the aspect ratio commands described in *Adjusting projector settings* on page 14.



NOTE

The 16:9 command delivers all video modes with black bands along the top and bottom edges of the screen. The *Match Input* command might deliver video modes with black bands along the top and bottom edges of the screen, depending on the input resolution.

SMART UF70 projector

Video mode	Aspect ratio	Horizontal frequency (kHz)	Vertical frequency (Hz)	Colour signal (MHz)
NTSC	4:3	15.73	29.96	3.58
PAL	4:3	15.62	25	4.43
SECAM	4:3	15.62	25	4.25 (f _{ob}) 4.06 (f _{or})

SMART UF70w projector

Video mode	Aspect ratio	Horizontal frequency (kHz)	Vertical frequency (Hz)	Colour signal (MHz)
NTSC	4:3	15.73	59.94	3.58
PAL	4:3	15.63	50	4.43
SECAM	4:3	15.63	50	4.25 and 4.41
PAL-M	4:3	15.73	59.94	3.58
PAL-N	4:3	15.63	50	3.58
PAL-60	4:3	15.73	59.94	4.43
NTSC 4.43	4:3	15.73	59.94	4.43

Connecting peripheral sources and outputs

Follow these instructions if you have a peripheral device to connect to your interactive whiteboard system, such as a DVD/Blu-ray player or a USB device.



NOTES

- Measure the distance between the projector and the peripheral device that you want to connect. Make sure that each cable is long enough, has plenty of slack and can be placed safely in your room without presenting a trip hazard.
- Do not disconnect cables from the ECP to connect peripheral devices because you could disconnect controls for your interactive whiteboard.
- Don't connect SMART Board Audio (SBA-L) USB speakers to the ECP. Connect these speakers to the projector using a dual-channel (left and right) RCA plugs-to-3.5mm audio connector cable (included with the speakers).
- The composite video connector and associated dual channel audio inputs on the ECP are for input only. These RCA jacks don't provide an output signal.



To connect a peripheral source or output to your projector

1. If you have speakers installed, turn the volume dial on the ECP all the way down to prevent buzzing or a spark.
2. If your peripheral device uses a composite video connection, connect its input cables to the ECP.

If your peripheral device uses a USB connection, connect its input cables to one of the available USB ports on the ECP.

3. Switch input sources to the peripheral device by pressing the **Input** button on the ECP or remote control.



NOTE

If your USB device does not work, the device may be malfunctioning or incompatible, or the USB port may be disabled. See *Disabling user USB access* on page 93.

4. Restore the volume on the ECP's volume dial.

Chapter 5

Maintaining your interactive whiteboard system

Maintaining your interactive whiteboard	35
Cleaning the projector	35
Focusing and adjusting the projector image	36
Replacing the projector lamp	37
Removing and replacing the projector lamp module	37
Resetting the lamp hours	40

This chapter includes methods for properly cleaning and preventing damage to your SMART Board 480i6 interactive whiteboard system.

Maintaining your interactive whiteboard

 
For information on maintaining your interactive whiteboard, see the *SMART Board 600 and D600 series interactive whiteboard installation and user's guide* (smarttech.com/kb/001414).

Cleaning the projector

WARNING

Cleaning a wall-mounted projector can result in a fall or injury. Use caution when climbing a ladder and consider removing the projector from its wall-mounting bracket to clean it.

CAUTION

- Never touch the mirror with your hands or a brush, and do not scrub the surface of the mirror with the supplied cleaning cloth. Instead, use the supplied cleaning cloth to clean the mirror with a light touch, and do not put any cleaning solvents on the cloth or the mirror. Do not apply pressure to the projector lens or mirror.
- Before you clean the projector, press the **Power**  button twice on the ECP or remote control to put the system in Standby mode and then allow the lamp to cool for at least 30 minutes.

- Do not spray cleaners, solvents or compressed air directly on the projector. Do not use spray cleaners or solvents near any part of the projector because they can damage or stain the unit. Spraying the system could spread a chemical mist on some of the projector's components and lamp, resulting in damage and poor image quality.
- Do not allow liquids or commercial solvents of any kind to flow into the projector base or head.



IMPORTANT

- When cleaning the interactive whiteboard system:
 - Wipe the exterior of the projector with a lint-free cloth.
 - If necessary, use a soft cloth moistened with a mild detergent to clean the projector housing.
- Do not use abrasive cleaners, waxes or solvents.

When cleaning the projector's mirror:

- Use a bellows bulb or air blower bulb (commonly found in audio-visual supply stores) to blow off dust. Never touch the mirror with your bare hands or a brush.
- If wiping the mirror is unavoidable, wear protective gloves and gather the cleaning cloth into a ball. Gently run the cleaning cloth across the mirror as you would a feather duster. Don't apply any pressure to the lens or mirror.

When cleaning the projector's lens:

- Use a bellows bulb or air blower bulb (commonly found in audio-visual supply stores) to blow off dust. Never touch the lens with your bare hands or a brush.
- If wiping the lens is unavoidable, wear protective gloves and gather the cleaning cloth into a ball. Gently run the cleaning cloth across the lens from the centre to the edge, using the cleaning cloth as you would a feather duster. Don't apply any pressure to the lens or mirror.

Focusing and adjusting the projector image

For information on focusing and adjusting the projector image, see *Focusing the image* on page 20 and *Adjusting the image* on page 21.

Replacing the projector lamp

This section provides instructions for replacing the projector lamp module.

Removing and replacing the projector lamp module

Eventually the lamp will dim and a message will appear reminding you to replace it. Make sure that you have a replacement lamp module before proceeding with the following instructions.



WARNING

- See [smarttech.com/compliance](https://www.smarttech.com/compliance) for the projector's MSDS documents.
- Replace the lamp module when the projector displays its lamp life warning message. If you continue to use the projector after this message appears, the lamp can shatter or burst, scattering glass throughout the projector.
- If the lamp shatters or bursts, leave and then ventilate the area.

Next do the following:

- Avoid touching the glass fragments because they can cause injury.
- Wash your hands thoroughly if you have come into contact with lamp debris.
- Thoroughly clean the area around the projector, and discard any edible items placed in that area because they could be contaminated.
- Call your authorised SMART reseller for instructions. Do not attempt to replace the lamp.
- Replacing the lamp module in a wall-mounted projector can result in a fall or injury. Use caution when climbing a ladder, and consider removing the projector from the wall-mounting bracket to replace the lamp module.
- Uncovering the lamp whilst the projector is mounted on the wall-mounting bracket can lead to product damage or personal injury from falling pieces of glass if the lamp is broken.


CHAPTER 5


Maintaining your interactive whiteboard system

- When replacing the projector lamp module:
 - Put the projector into Standby mode and wait 30 minutes for the lamp to cool completely.
 - Do not remove any screws other than those specified in the lamp replacement instructions.
 - Wear protective eyewear whilst changing the lamp module. Failure to do so can cause injuries including loss of eyesight if the lamp shatters or bursts.
 - Use only replacement lamp modules approved by SMART Technologies. Contact your authorised SMART reseller for replacement parts.
 - Never replace the lamp module with a previously used lamp module.
 - Always handle the fragile lamp assembly with care to prevent premature lamp failure or exposure to mercury. Use gloves when touching the lamp module. Do not touch the lamp with your fingers.
 - Recycle or dispose of the lamp module as hazardous waste in accordance with local regulations.

You need a Phillips No. 2 screwdriver and a flat screwdriver to complete these procedures.

To remove the old lamp module


1. Press the **Power**  button twice on the remote control or the ECP to put the projector into Standby mode.
2. Wait at least 30 minutes for the projector to cool down.
3. Disconnect the power cable from the projector.
4. Use a Phillips screwdriver to loosen the two captive screws.

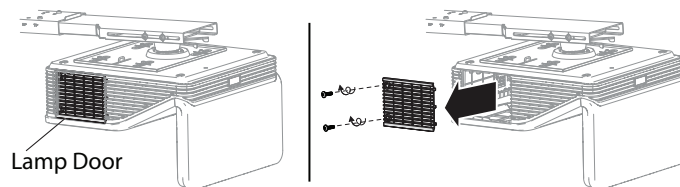

CHAPTER 5

Maintaining your interactive whiteboard system

5. Use a Phillips screwdriver to loosen the two captive screws from the bottom of the lamp module and gently remove lamp module.

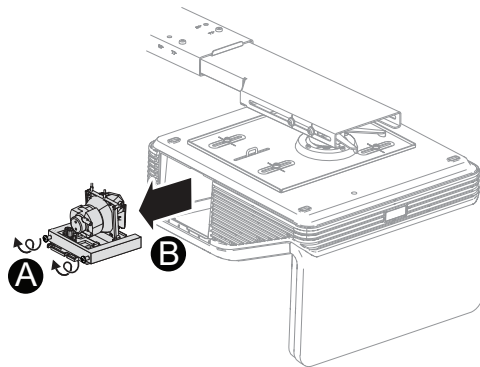


NOTE

Don't try to remove these screws. Captive screws can't be removed, only loosened.

To put the new lamp module into the projector

1. Remove the new lamp module from its packaging.
2. Carefully place the lamp module into the projector and gently press the power end of the lamp module against the projector to ensure that the power plug makes contact with the projector's power port.

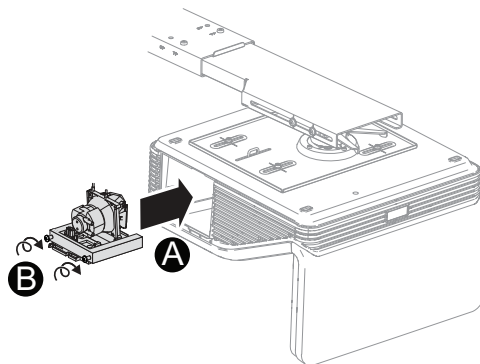

NOTE

You should be able to place the lamp module into the projector easily without applying much force.


3. Use the Phillips screwdriver to secure the captive screws.



IMPORTANT

Do not over-tighten the screws.

4. Replace the lamp cover.
5. Connect the power cable to the wall socket.

6. Press the **Power**  button once on the remote control or ECP to confirm that the projector is operating and that the lamp module is correctly installed.
7. Put the old lamp module in a secure container and handle it gently until you recycle it.

To finish the projector lamp module installation

1. Turn on the projector.
2. Adjust the projector image if necessary (see *Adjusting the image* on page 21).
3. Access the service menu to reset the lamp hours (see *Resetting the lamp hours* below).
4. Activate the projector's alert emails and lamp warnings if they've been deactivated (see *Email alerts* on page 61 and *Control panel* on page 56).

Resetting the lamp hours

Once you have replaced the lamp module, you need to access the projector service menu and reset the lamp hours. To prevent accidental errors, only a system administrator should perform this procedure.



NOTE

Always reset the lamp hours after you replace the lamp, because lamp service reminders are based on the current hours of use.

To reset the lamp hours

1. Using the remote control, press the following buttons quickly to access the service menu:
Down, Up, Up, Left, Up.



CAUTION

Do not adjust any settings in the service menu other than those listed in this guide. Changing other settings can damage or affect the operation of your projector and may invalidate your warranty.

2. Scroll down to *Lamp Hour Reset* and then press **OK**.

Both *Lamp Hour* values (Standard and Economy) reset to zero.



CAUTION

Do not reset the lamp hours unless you have just replaced the lamp module. Resetting the lamp hours on an old lamp can damage your projector as a result of lamp failure.



NOTE


You're unable to reset the Display Hour value because it's the running total of hours the projector has been in use.

CHAPTER 5

Maintaining your interactive whiteboard system

3. Press the **Menu** button on the remote control.

The *SMART UF 70 Settings* menu appears.

4. Select  to confirm that *Lamp Hour* is reset to zero.

Chapter 6

Troubleshooting your interactive whiteboard system

Before you start	44
Locating status lights	44
Locating serial numbers	45
Determining your interactive whiteboard system's status	45
Resolving interactive whiteboard issues	47
Resolving operation issues	47
Resolving connection issues	47
Resolving controller module issues	48
Resolving projector issues	48
Resolving projector errors	48
Resolving image issues	48
Loss of signal	48
Partial, scrolling or incorrectly displayed image	49
Unstable or flickering image	50
Frozen image	50
Your image doesn't fit the interactive whiteboard	51
The image from your connected laptop computer isn't projected	51
Unaligned projected image	51
Resolving audio issues	51
Resolving network communication issues	52
Resolving ECP issues	53
Accessing the service menu	53
Retrieving your password	53
Resetting the projector	54
Transporting your interactive whiteboard system	54

This chapter provides basic troubleshooting information for your interactive whiteboard system.

For issues not covered in this chapter, consult the SMART Support website (smarttech.com/support) or contact your authorised SMART reseller (smarttech.com/where).



Before you start


Before you troubleshoot your interactive whiteboard system or contact SMART Support or your authorised SMART reseller for assistance, you need to do the following:


- Locate your interactive whiteboard system's status lights
- Locate your interactive whiteboard system's serial numbers

Locating status lights

Your interactive whiteboard system consists of several components, which have their own status lights:

- Your interactive whiteboard's Ready light is located on the lower-right of the frame.
- Your projector's Power  and Service  lights are located on the bottom of the projector.

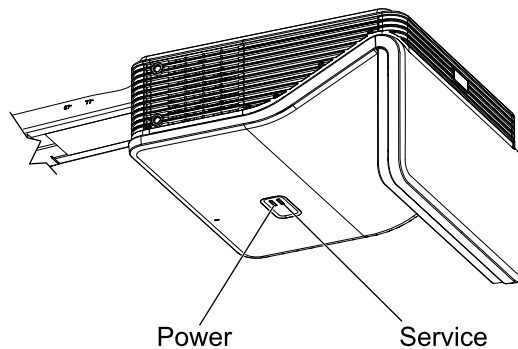

- The ECP's **Power**  button (see *Using the Extended Control Panel (ECP)* on page 23) also functions as a status light.


CHAPTER 6

Troubleshooting your interactive whiteboard system

Locating serial numbers

The serial number on your SMART Board 600 series interactive whiteboard is located on the lower right-hand edge of the interactive whiteboard's frame. For more information, see the *SMART Board 600 and D600 series interactive whiteboard installation and user's guide* (smarttech.com/kb/001414).

The SMART UF70 or SMART UF70w projector serial number is located on the top of the projector.

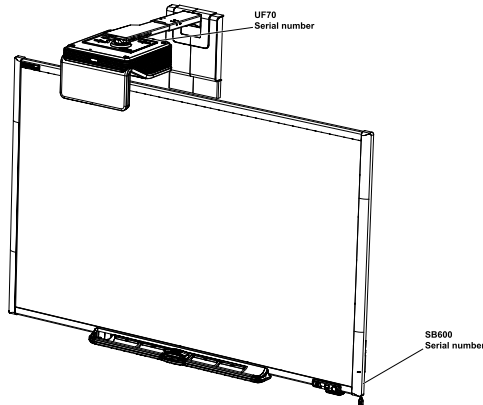





TIP

You can also access the projector's serial number through the on-screen menu. For more information, see *Adjusting projector settings* on page 14.

For the locations of serial numbers on other components and accessories, see smarttech.com/support.





Determining your interactive whiteboard system's status

Use the following table to determine the status of your interactive whiteboard system:

 Projector Power light	 Projector Service light	 ECP light	 Interactive whiteboard Ready light	Projected image	Touch and pen control	Status and related troubleshooting
Normal operating statuses						
Solid green	Off	Solid green	Solid green	Correct	Full control	The system is operating normally. If image or sound issues occur, see the remaining sections of this chapter for troubleshooting information.
Flashing green	Off	Flashing green	Off	None	None	The system is starting up.
Solid amber	Off	Solid amber	Off	None	None	The system is in Standby mode.

CHAPTER 6

Troubleshooting your interactive whiteboard system

 Projector Power light	 Projector Service light	 ECP light	 Interactive whiteboard Ready light	Projected image	Touch and pen control	Status and related troubleshooting
Flashing amber	Off	Flashing amber	Off	None	None	The system is entering Standby mode.
Solid green	Off	Solid green	Solid amber	N/A	None	The interactive whiteboard's controller module is starting up. If this process takes longer than 10 seconds, see <i>Resolving controller module issues</i> on page 48.
Solid green	Off	Solid green	Flashing amber	N/A	N/A	The interactive whiteboard's controller module is ready to receive a firmware update or is applying a firmware update. If the Ready light flashes amber but no firmware update appears on the screen, see <i>Resolving controller module issues</i> on page 48.
Error statuses						
Solid green	Off	Solid green	Solid green	Incorrect	Full control	There's an issue with the projected image. See <i>Resolving image issues</i> on page 48.
Solid green	Off	Solid green	Solid green	Correct	None	There's an issue with the interactive whiteboard. See <i>Resolving operation issues</i> on next page.
Solid green	Off	Solid green	Flashing green	Correct	Touch only	SMART Product Drivers isn't installed or running correctly on the connected computer.
Solid green	Off	Solid green	Off OR Solid red	N/A	None	There's an issue with the connections between the interactive whiteboard and the other components of the system. See <i>Resolving connection issues</i> on next page.
Solid green	Off	Off	Off OR Solid red	N/A	N/A	The ECP isn't receiving power. See <i>Resolving ECP issues</i> on page 53.
Solid amber	Flashing red	N/A	N/A	None	N/A	There's an issue with the projector lamp. See <i>Resolving projector errors</i> on page 48.
Off	Flashing red	N/A	Off	None	None	The projector's operating temperature has been exceeded. See <i>Resolving projector errors</i> on page 48.
Off	Solid red	N/A	N/A	None	N/A	There's an issue with the projector's fan or colour wheel. See <i>Resolving projector errors</i> on page 48.
Off	Off	Off	Off	None	None	The projector power cable isn't properly connected. OR There's an issue with the mains power supply (for example, the circuit breaker is off).

Resolving interactive whiteboard issues

This section includes information on resolving issues with your interactive whiteboard.

For information not covered in this section, see the *SMART Board 600 and D600 series interactive whiteboard installation and user's guide* (smarttech.com/kb/001414).

Resolving operation issues

- Confirm that the 4-wire cable (and 2-wire cable, if present) is connected to the interactive whiteboard's controller module.
- If necessary, complete additional troubleshooting with the guidance of SMART Support using SMART Board Diagnostics.

To resolve operation issues, complete the following tasks:

- Confirm that the 4-wire cable (and 2-wire cable, if present) is connected to the interactive whiteboard's controller module.
- Confirm that the interactive whiteboard's USB cable is properly connected between the computer and the correct USB port on the ECP.
- Reset the interactive whiteboard system. If necessary, complete additional troubleshooting with the guidance of SMART Support using SMART Board Diagnostics.

Resolving connection issues

To resolve connection issues, complete the following tasks:

- Confirm that the ECP cable harness's 4-pin power mini-DIN connector is properly connected to the **DC 5V 2A** connector on the projector.
- Confirm that the USB cable is properly connected from the interactive whiteboard to the correct USB port on the ECP.
- Confirm that the USB cable is properly connected from a fully functional USB port on the computer to the correct USB port on the ECP.
- Confirm that the projector's on-screen menu option for the USB source is set to associate the USB port on the ECP with the correct video source on the projector.
- If necessary, complete additional troubleshooting on any devices between the USB connection from the computer to the interactive whiteboard system, including any USB hubs and extension cables.
- Confirm that the USB cable is properly connected from a fully functional USB port on the computer to the interactive whiteboard.

Resolving controller module issues

If the controller module takes longer than 10 seconds to start up, disconnect the interactive whiteboard's USB cable, wait 10 seconds, and then reconnect it.

If the issue persists, run the firmware upgrade utility, located in the same folder as your SMART Product Drivers (for example, **C:\Program Files\SMART Technologies\SMART Board Drivers\SMARTFirmwareUpdater.exe** [Windows® operating systems] or **\Applications\SMART Board Drivers\SMARTFirmwareUpdater.app** [Mac computers]). For more information about performing a firmware upgrade, see smarttech.com/kb/123545 or contact SMART support.

If the Ready light indicates that a firmware update is in progress but no update is actually taking place, disconnect the interactive whiteboard's USB cable, wait a few seconds, and then reconnect it.

Resolving projector issues

Resolving projector errors

Resolving image issues


To resolve common image issues, complete the following tasks:

- Ensure the computer or other video source is on and set to display a resolution and refresh rate supported by the projector (see *Video format compatibility* on page 27).
- Ensure that the video source is properly connected to the projector.
- Press the Input Select button on the remote control or ECP to switch to the correct video source.

If these tasks don't resolve the issue, refer to the following sections for additional troubleshooting information.

Loss of signal

If a video source signal is not detected, out of range of the projector's support video modes or the signal is being switched to a different device or input, the projector doesn't show a source signal and instead displays the SMART logo on a blue screen.

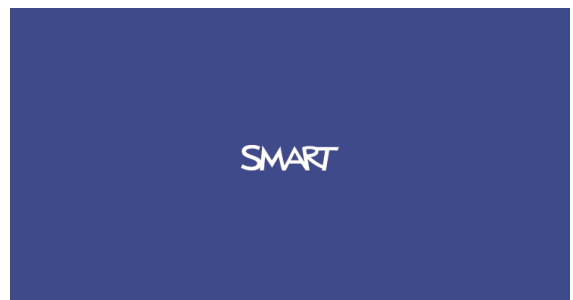

To resolve signal loss issues

1. Wait approximately 45 seconds for the image to synchronise. Some video signals require a longer synchronisation period, cycling back through inputs to the one that you want also helps image synchronisation.
2. If the image doesn't synchronise, check the cable connections to the projector and the ECP.
3. Ensure that the image signal is compatible with the projector (see *Video format compatibility* on page 27).
4. If there are any extension cables, switch boxes, connection wall plates or other devices in the video connection from the computer to the projector, temporarily remove them to ensure that they are not causing the video signal loss.
5. If your projector still doesn't show a source signal, contact your authorised SMART reseller.

Partial, scrolling or incorrectly displayed image



NOTE

This procedure may vary depending on your version of Windows operating system or Mac OS X operating system software and your system preferences. The following procedures apply to Windows 7 operating systems and Mac OS X 10.8 operating system software.

To resolve a partial, scrolling or incorrectly displayed image on your Windows computer

1. Select **Start > Control Panel**.
2. Click **Display** and then select **Adjust resolution**.
3. Verify that your display resolution setting is 1024 × 768 (SMART UF70 projector), 1280 × 800 (SMART UF70w projector in 16:10 aspect ratio mode) or 1280 × 720 (SMART UF70w projector in 16:9 aspect ratio mode).
4. Click **Advanced settings** and then click the **Monitor** tab.
5. Verify that the screen refresh rate is 60 Hz.

To resolve a partial, scrolling or incorrectly displayed image on your Mac computer

1. Select **Apple Menu > System Preferences**.
The *System Preferences* dialogue box appears.
2. Click **Displays**.
3. Verify that your display resolution setting is 1280 × 800 (WXGA).
4. Verify that the screen refresh rate is 60 Hz.

Unstable or flickering image

If the projector's image is unstable or flickering, you could have different frequency or tracking settings on your input source than on your projector.



IMPORTANT

Write down your setting values before adjusting any of the settings in the following procedure.

To resolve your unstable or flickering image

1. Check the display mode of your computer's graphics card. Make sure that it matches one of the projector's compatible signal formats (see *Video format compatibility* on page 27). Refer to your computer's manual for more information.
2. Configure the display mode of your computer's graphics card to make it compatible with the projector. Refer to your computer's manual for more information.
3. Adjust the **Frequency**, **Tracking**, **H-position** and **V-position** settings in the on-screen menu. See *Adjusting projector settings* on page 14.
4. Optionally, reset the projector as described in *Resetting the projector* on page 54 to adjust the frequency and tracking to their original values.



IMPORTANT

This action resets all values to their defaults.

Frozen image

If your projector has a frozen image, perform the following procedure.

To resolve a frozen image

1. Ensure that the Hide Display feature is off.
2. Press the **Hide** button on the projector's remote control to hide or show the display.
3. Ensure that your source device, such as your DVD player or computer, isn't malfunctioning.
4. Put the projector into Standby mode and then wait 30 minutes for it to cool down.
5. Disconnect the power cable from the power socket and then wait at least 60 seconds.
6. Connect the power cable and then turn on the projector.
7. If the previous steps don't resolve the issue, contact your authorised SMART reseller.

Your image doesn't fit the interactive whiteboard

If you're using a SMART UF70w projector with a wide screen interactive whiteboard, verify that you're using the correct aspect ratio mode for the interactive whiteboard:

Interactive whiteboard	Aspect ratio mode
SMART Board 685 interactive whiteboard	16:10
SMART Board 690 interactive whiteboard	16:9

You can set the aspect ratio mode using the Native DLP Resolution setting in the Projector Functions menu (see *Adjusting projector settings* on page 14).

The image from your connected laptop computer isn't projected

Laptop computer settings can interfere with projector operations.

Some laptop computers deactivate their screens when you connect a secondary display device. Refer to your computer's manual for details on reactivating the computer's display screen.

Unaligned projected image

Alignment errors occur when the projected image isn't perpendicular to the screen. Alignment errors can occur when you mount your interactive whiteboard system on an uneven surface or a wall that has obstructions, or if you swivel the projector too far from the vertical centre of your interactive whiteboard.

Use the instructions in the *SMART Board 660i5, 680i5, 685i5 or 690i5 interactive whiteboard system installation guide* (smarttech.com/kb/154547) to eliminate most image alignment issues.

The projector image can slip if the projector is moved often or installed in a location prone to vibration, such as next to a heavy door. Follow these precautions to help prevent the image from becoming misaligned:

- Make sure that the installation wall is plumb and square and doesn't move or vibrate excessively.
- Make sure that there are no obstructions behind the projector's wall-mounting bracket and that the bracket is firmly secured to the wall according to the installation instructions.
- Adjust the projected image. See the included *SMART Board 660i5, 680i5, 685i5 and 690i5 interactive whiteboard system installation guide* (smarttech.com/kb/154547) and *Adjusting the image* on page 21.

Resolving audio issues

The projector does have integrated speakers, you can connect an external audio system to the audio output connector in the projector's connection panel such as the SMART SBA-L projection audio system (smarttech.com/kb/142552)

If no sound is coming from your external audio system, perform the following procedure.

**NOTE**

You might need to configure your computer to pass audio through HDMI if it isn't configured automatically.

To resolve audio issues

1. Ensure that the speakers' or audio system's cables are properly connected to the audio output plug on the projector's connection panel.
2. Press the **Mute** button on the projector's remote control and if Audio Mute is on, turn it off.
3. Check the ECP's volume knob or use the projector's remote control to ensure that the volume isn't at the lowest setting.
4. Ensure that your speaker or audio system is on and that the volume is turned up.
5. Check that your source input, such as your computer or video device, isn't malfunctioning. Ensure that its audio output is on and that the volume isn't set to the lowest position.

**NOTE**

You must display the source input's video to play its audio through the connected speakers or audio system.

6. If the previous steps don't resolve the issue, contact your authorised SMART reseller.

Resolving network communication issues

If you don't have network access, perform the following procedure to troubleshoot your system.

To resolve network communication issues

1. Ensure that your network cable is properly connected to the RJ45 connection on the projector's connection panel. There are two RJ45 ports one is for the network and one is for projector 2, ensure that you have the network cable plugged into the correct one.
2. Ensure that the LAN warning light on the projector is green. To activate the projector's network features, use the "vgaoutnetenable=on" RS-232 command (see *Projector programming commands* on page 66) or enable the **Network and VGA Out** setting (see *Adjusting projector settings* on page 14). The network features on the projector don't work until you complete one of these tasks.
3. To ensure that the network function is enabled, press the **Menu** button and then select the **Network Settings** menu to check the IP address. See *Adjusting projector settings* on page 14 for a description of the IP address field. Enter this IP address into your browser or SNMP agent.
4. If you still don't have network access, contact your network administrator. If your administrator is unable to resolve the issue, contact your authorised SMART reseller.

Resolving ECP issues

If the ECP isn't receiving power, complete the following tasks:

- Confirm that the ECP cable harness's 11-pin connector is properly connected to the ECP.
- Confirm that the ECP cable harness's 7-pin min-DIN connector is properly connected to the ECP connector on the projector.

Accessing the service menu



CAUTION

- To prevent tampering or unintentional changes, only system administrators should access the service menu. Do not share the service menu access code with casual users of your interactive whiteboard system.
- Do not adjust any settings in the service menu other than those listed in this guide. Changing other settings can damage or affect the operation of your projector and may invalidate your warranty.

Retrieving your password

If you forget the projector's password, you can retrieve it by accessing the projector service menu directly from the projector or from the password settings menu on your projector's webpage (see *Password settings* on page 62).

To retrieve your password from the service menu

1. Using the remote control, press the following buttons quickly to access the service menu:
Down, Up, Up, Left, Up.
2. Scroll to *Password Get* and then press **Enter** on the remote control.
The password appears on the screen.
3. Write down the password.
4. Scroll to *Exit* and then press **Enter** on the remote control to exit the projector service menu.

Resetting the projector

At some point during troubleshooting, you might need to reset all projector settings.



IMPORTANT

This action is irreversible.

To reset all projector settings

1. Using the remote control, press the following buttons quickly to access the service menu:
Down, Up, Up, Left, Up.
2. Scroll to *Factory Reset* and then press **Enter** on the remote control.
3. Scroll to *Exit* and then press **Enter** on the remote control to exit the projector service menu.

Transporting your interactive whiteboard system

Save your original SMART Board interactive whiteboard packaging so that it's available if you need to transport your interactive whiteboard system. When required, repack it with all of the original packaging. This packaging was designed to provide optimal shock and vibration protection. If you no longer have your original packaging, purchase the same packaging directly from your authorised SMART reseller.

If you prefer to use your own packaging materials, make sure that you adequately protect your unit. Make sure that the projector lens and mirror are protected against any physical contact or pressure which may damage the projector's optics. Send your interactive whiteboard in an upright position to deter carriers from placing heavy objects on it.

Appendix A

Remotely managing your system through a network interface

Webpage management	55
Accessing webpage management	56
Home	56
Control panel	56
Control panel II	59
USB Control settings	59
Network settings	60
Email alerts	61
Password settings	62
Simple Network Management Protocol (SNMP)	62

This chapter includes detailed instructions on how to remotely manage your SMART Board 480i6 interactive whiteboard system settings through a network interface.

Webpage management

You can access advanced setup features via the projector's webpage. This webpage enables you to manage the projector from a remote location using any computer connected to your intranet.



NOTE

To access the webpage, your browser must support JavaScript. Most commonly used browsers like Internet Explorer® and Firefox® support JavaScript.

Accessing webpage management

Before you can access the webpage, connect your projector to the network and then enable the projector's network functions using the projector's menu. An IP address appears on the on-screen display.

To use the management webpage

1. Start your Internet browser.
2. Type the IP address in the address line field and then press ENTER.

The *SMART UF 70 Projector Settings* (or *SMART UF 70w Projector Settings*) window appears.

3. Select the menu options in the left pane to access the settings on each page.
4. Modify settings using your computer's mouse and keyboard and then click **Submit** or another action button next to each setting you change.

Home

The Home menu page displays basic projector information and enables you to select the on-screen display language.




NOTE

You can view basic projector information but you're unable to change it (with the exception of the on-screen display language) from the Home menu page.

Submenu setting	Description
Language	Displays language options
Projector Information	Displays current projector information

Control panel

This menu enables you to manage the projector audio and video status, alerts and appearances using an Internet browser.

Submenu setting	Description
Power	Turns the projector on or puts it into Standby mode. Select the Power ON or Power OFF button.
Restore All Projector Defaults	Returns projector settings to default values or refreshes the current settings. Select Submit or Refresh .
<div>  IMPORTANT The Submit option is irreversible and resets all values. </div>	
Volume	Adjusts the projector's volume from -20 to 20.




APPENDIX A

Remotely managing your system through a network interface

Submenu setting	Description
Mute	Turns the mute settings on or off. Select On to mute the projector's sound and Off to turn off mute.
Volume Control	Enables volume control on the on-screen display. Select On to enable projector volume adjustment and select Off to disable projector volume adjustment.
Closed Captioning	Turns the closed captioning feature on or off.
Language	Sets the closed captioning language to CC1 or CC2 . Typically, CC1 displays US English subtitles, whilst CC2 displays other regional languages, such as French or Spanish, depending on television channel or media setup.
Display Mode	Adjusts the display output to SMART Presentation , Bright Room , Dark Room , sRGB and User modes so that you can project images from various sources with consistent colour performance: <ul style="list-style-type: none">• SMART Presentation is recommended for colour fidelity.• Bright Room and Dark Room are recommended for locations with those conditions.• sRGB provides standardised accurate colour.• User enables you to apply your own settings.
Brightness	Adjusts projector brightness from 0 to 100.
Contrast	Adjusts the difference between the lightest and darkest parts of the image from 0 to 100.
Frequency	Adjusts the display data frequency of the projected image from -5 to 5 to match the frequency of your computer's graphics card.
Tracking	Synchronises your projector's display timing with your computer's graphics card from 0 to 31.
Sharpness	Adjusts the projected image's sharpness from 0 to 31.
White Peaking	Adjusts the image colour brightness from 0 to 10 whilst providing more vibrant white shades. A value closer to 0 creates a natural image and a value closer to 10 enhances brightness.
Degamma	Adjusts the colour performance of the display from 0 to 3.
Colour	Adjusts the Red, Green, Blue, Cyan, Magenta and Yellow colours on the projector from 0 to 100 to provide custom colour and luminance output. Each colour has a default value of 100. Adjustments to the colour settings register to the User mode.
Auto Signal Detect	Enables or disables signal searching of input connectors. <ul style="list-style-type: none">• Select On to have the projector continuously switch inputs until it finds an active video source.• Select Off to maintain signal detection in one input.
Lamp Reminder	Select On to show or Off to hide the lamp replacement reminder when it appears. This reminder appears 100 hours before the recommended lamp replacement.



APPENDIX A

Remotely managing your system through a network interface

Submenu setting	Description
Lamp Mode	Adjusts lamp brightness to Standard or Economy . Standard displays a high-quality, bright image. Economy increases the lamp life by decreasing the brightness of the image.
Auto Power Off	Sets the length of the auto power off countdown timer between 1 and 240 minutes. The timer begins to count down when the projector no longer receives a video signal. The timer finishes when the projector enters Standby mode. Select 0 to turn off the timer.
Zoom	Adjusts the zoom to the centre of the image in or out from 0 to 30.
H-position (RGB input)	Moves the horizontal position of the source video left or right from 0 to 100 (relative to the projected image). <div> NOTE This is useful in situations where the source video is cut off.</div>
V-position (RGB input)	Moves the vertical position of the source video up or down from -5 to 5 (relative to the projected image). <div> NOTE This is useful in situations where the source video is cut off.</div>
Aspect Ratio	Adjusts the image output to Fill Screen , Match Input or 16:9 . <ul style="list-style-type: none">• Fill Screen produces an image that fills the entire screen by stretching and scaling.• Match Input matches the projector's aspect ratio to the input's aspect ratio. As a result, black bands might appear along the top and bottom edges of the screen horizontally (letterbox format) or along the left and right edges of the screen vertically (pillarbox format).• 16:9 changes the output to 16:9 by letterboxing the image, which is recommended for use with HDTV and DVDs enhanced for wide-screen television. <div> NOTE See <i>Video format compatibility</i> on page 27 for appearance descriptions in each mode.</div>
Startup Screen	Sets the type of startup screen to SMART or User . The SMART screen is the default SMART logo on a blue background. The User screen uses the saved picture from the Capture User Startup Screen function.
Video Mute	Turns the video mute setting on or off. Select On to hide the display and Off to show it again.

APPENDIX A

Remotely managing your system through a network interface

Submenu setting	Description
High Speed Fan	Adjusts the speed of the projector's fan. Select High or Normal .  NOTE Use the High setting when the projector's temperature is high or the altitude is above 1800m (6000').
Projector Mode	Adjusts the projection mode to Front , Ceiling , Rear or Rear Ceiling .  IMPORTANT SMART recommends that you never change this setting from the Ceiling projection mode.
Source	Adjusts the input source to VGA-1 , VGA-2 , Composite , S-Video or HDMI .
VGA1	Assigns an alternative name to your VGA 1 input, which appears when you select the VGA 1 input.
VGA2	Assigns an alternative name to your VGA 2 input, which appears when you select the VGA 2 input.
Composite	Assigns an alternative name to your Composite video input, which appears when you select the Composite video input.
HDMI	Assigns an alternative name to your HDMI input, which appears when you select the HDMI input.
Emergency Alert	Turns the on-screen alert broadcast message on or off. When enabled, this message displays over the current projected image.
Alarm Message / Alert Message	Displays an on-screen emergency notification message (maximum 60 characters).

Control panel II



USB Control settings

This menu allows you to associate a video source with a USB port on the ECP.

Submenu setting	Description
USB1 Source	Enables touch for the selected video source (VGA , HDMI1 , HDMI2 or Disabled) by associating the video source with the room computer USB port (USB1) on the ECP.
USB2 Source	Enables touch for the selected video source (VGA , HDMI1 , HDMI2 or Disabled) by associating the video source with the laptop USB port (USB2) on the ECP.

Network settings

This menu allows you to use or not use Dynamic Host Control Protocol (DHCP) and to set the network-related addresses and names when DHCP is not used.

Submenu setting	Description
DHCP	<p>Determines whether the projector's IP address and other network settings are dynamically assigned by a DHCP server or manually set.</p> <ul style="list-style-type: none"> • On allows the network's DHCP server to assign a dynamic IP address to the projector. • Off allows you to manually set the projector's IP address and other network settings.
IP Address	Displays or allows you to set the projector's IP address in values between 0.0.0.0 and 255.255.255.255.
Subnet Mask	Displays or allows you to set the projector's subnet mask number in values between 0.0.0.0 and 255.255.255.255.
Gateway	Displays or allows you to set the projector's default network gateway in values between 0.0.0.0 and 255.255.255.255.
DNS	Displays or allows you to set the projector's IP address for your network's primary domain name server in values between 0.0.0.0 and 255.255.255.255.
Group Name	Displays or allows you to set the projector's workgroup name (maximum 12 characters).
Projector Name	Displays or allows you to set the projector's name (maximum 12 characters).
Location	Displays or allows you to set the projector's location (maximum 16 characters).
Contact	Displays or allows you to set the contact name or number for projector support (maximum 16 characters).
SNMP	Turns the Simple Network Management Protocol (SNMP) agent on or off.
Read-Only Community	<p>Sets a password that is required for each SNMP get request to the device.</p> <div>  NOTE The default for Read-Only Community is public. </div>
Read/Write Community	<p>Sets a password that is required for each SNMP set request to the device.</p> <div>  NOTE The default for Read/Write Community is private. </div>

APPENDIX A

Remotely managing your system through a network interface

Submenu setting	Description
Trap Destination Address	Displays or allows you to set the IP address of the network's SNMP TRAP manager in values between 0.0.0.0 and 255.255.255.255. The trap destination address is the IP address of the computer assigned to handle unsolicited data generated by SNMP TRAP events generated by the projector, such as power state changes, projector failure modes, a lamp needing to be replaced or other issues.

Email alerts

This menu enables you to enter your preferred address for receiving email alerts and adjust related settings.

Submenu setting	Description
Email Alert	Selects Enable to turn on or Disable to turn off the Email Alert function.
To	Displays or allows you to set the email address of the email alert recipient.
CC	Displays or allows you to set the email address of the email alert "copy to" recipient.
From	Displays or allows you to set the email address of the user who sends the email alert.
Subject	Displays or allows you to set the email alert subject.
Outgoing SMTP server	Displays or allows you to set the Simple Mail Transfer Protocol (SMTP) server that you use on your network.
Username	Displays or allows you to set the SMTP server user name.
Password	Displays or allows you to set the SMTP server password.
Alert Condition	Sends email alerts whenever Lamp Warning , Low Lamp Life , Temperature Warning and Fan Lock conditions occur. Select the settings that you want and then click Submit .



NOTE

The projector sends an alert email (SMART Alert) to your email address. Click **Email Alert Test** to confirm that your email address and SMTP server settings are correct by sending a test email (SMART Alert-Test Mail).

If the settings are not correct, the email alert messages aren't sent or received successfully and no warning or notification messages are available to advise of this state.

APPENDIX A

Remotely managing your system through a network interface

Password settings

This menu provides a security function that allows an administrator to manage projector use and enable the Administrator Password function.

Submenu setting	Description
Password	When the password function is enabled, the administrator password is required to access Web Management. Select Disable to allow remote web management of the projector without requiring a password.



NOTES

- The first time you enable the password settings, the default password value is four numbers, for example, 1234.
- The maximum allowable password length is four numbers or letters.
- If you forget the projector password, refer to *Accessing the service menu* on page 53 to set the projector setting to factory defaults.

Simple Network Management Protocol (SNMP)

Your projector supports a list of SNMP commands as described in the management information base (MIB) file. You can download this file by browsing to smarttech.com/software and clicking the MIB files link in the *Hardware* section for the SMART UF 70 projector.

The SNMP agent in your projector supports SNMP version 1 or 2. Upload the MIB file to your SNMP management system application and then use it as described in your application's user guide.

Appendix B

Remotely managing your system through an RS-232 serial interface

Connecting your room control system to the SMART UF 70 projector	64
Pin configuration on the projector's RS-232 connector	64
Serial interface settings	64
Projector programming commands	66
Power state controls	66
Source Application Selection	66
Command/response definitions	67
Field definitions	67
Video Control	68
Command/response definitions	68
Field definitions	70
Audio Control	73
Command/response definitions	73
Field definitions	74
Command/response definitions	76
Field definitions	76
Command/response definitions	78
Field definitions	80
Command/response definitions	85
Field Definitions	85
Command/response definitions	88
Field definitions	88
Command/response definitions	90

This appendix includes detailed instructions on how to set up your computer or room control system to remotely manage your SMART Board 480i6 interactive whiteboard system settings through an RS-232 serial interface.

Connecting your room control system to the SMART UF 70 projector

By connecting a computer or room control system to the RS-232 serial interface of the SMART UF 70 projector, you can select video inputs, start up or shut down your interactive whiteboard system and request information such as projector lamp use, current settings and network addresses.

Pin configuration on the projector's RS-232 connector

The following table provides the pin configuration on the SMART UF 70 projector. This pin configuration follows a three-wire connection so that a straight-through male-to-female RS-232 serial cable connects to the projector's serial interface in the following arrangement:

Pin number	Projector's female RS-232 connector
2	Transmit
3	Receive
5	Signal Ground



NOTE

On projectors with the RS-232 connector labelled **Control 9v** (rather than **Control**), pin 1 functions as a +9V DC power source only for use with older model ECPs such as the ones supplied with SMART UF55 projectors.

Serial interface settings

The serial interface of the projector acts as a Data Communications Equipment (DCE) device and its settings can't be configured. You must configure your computer's serial communication program (such as Microsoft® HyperTerminal) or your room control system's serial communication settings with the following values:

Setting	Value
Data Rate	19.2 kbps
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

APPENDIX B

Remotely managing your system through an RS-232 serial interface



NOTES

- Asynchronous mode is disabled by default in the projector.
- All commands should be in ASCII format. Terminate all commands with a carriage return.
- All responses from the projector are terminated with a command prompt. Wait until you receive the command prompt indicating that the system is ready for another command before you continue.
- The room control feature of the projector is always on.



To configure your computer's serial interface

1. Turn on your computer and then start your serial communications program or terminal emulation program.
2. Connect your computer to the serial connection cable you previously connected to the projector.
3. Configure your serial interface settings using the values in the table in the previous section and then press ENTER.

The > character appears as a command prompt on the line that follows.



NOTE

If no message or an error message appears, your serial interface configuration isn't correct. Repeat step 3.

4. Type commands to configure your settings.



NOTES

- To see a list of commands available in the current operating mode, type ? and then press ENTER.
- If you're using a terminal emulation program, turn on your program's local echo setting to see characters as you type them.

Projector programming commands

This section documents the projector programming commands and responses.

Power state controls

These commands put the projector in and out of Standby mode and request the projector's current power state. The projector's power state determines whether certain commands are available at that time. These settings are available even when the projector is in Standby mode.

Command	Response
on	powerstate=[field]
off	powerstate=[field]
off now	powerstate=[field]
get powerstate	powerstate=[field]

The following table describes the power state commands:

Command	Description
on	Turns on the projector.
off	Starts the shutdown process. A dialogue box appears with the message, "Press Power Button to Turn off Projector." You must send a second Off command within 10 seconds to put the projector into Standby mode.
off now	Shuts down the projector immediately. You can't delay or cancel this command.
get powerstate	Indicates the projector's current power state.

The following table describes the power state fields:

Field	Description
Powering	The projector is turning on.
On	The projector is on.
Cooling	The projector is cooling.
Confirm off	Confirm off is a non-selectable power state that is returned during stage one of the two-button Off sequence.
Idle	The projector is off but still receiving power (Standby mode).

Source Application Selection

Switches amongst different input sources and embedded applications, if any. Also controls the USB switch for these given sources.

APPENDIX B

Remotely managing your system through an RS-232 serial interface

Command\response definitions

Command	Response	Responds when powered off
set input [target]	input=[current]	no
get input	input=[current]	yes
get videoinputs	videoinputs=[current videoinputs]	yes
set usb1source [target]	usb1source=[current]	yes
get usb1source	usb1source=[current]	yes
set usb2source [target]	usb2source=[current]	yes
get usb2source	usb2source=[current]	yes

Field definitions

Field	Possible values	Description
current input	<ul style="list-style-type: none">• VGA1• Composite• HDMI1• None	The input source to switch to. None is a non-selectable input and is returned in response to a get input command when the projector is turned off.
target input	<ul style="list-style-type: none">• = VGA1• = Composite• = HDMI1• = None• = Next	Target input to set the input to. If the input is next, the projector will move to the next item from the possible values list and return a response equivalent to if the user had specified that input directly.
current videoinputs	<ul style="list-style-type: none">• VGA1, Composite, HDMI1	Returns a comma separated list of the available inputs on the projector. The strings returned in this command must match the strings used for the input selection from OSD. VGA1 and HDMI1 are local at projector. VGA2 and HDMI2 are at UCP. The maximum could be 10 inputs in the current list. (max 14 reserved).
current usb1source	<ul style="list-style-type: none">• VGA1• HDMI1• Disabled	Current value that the USB1 switch will be enabled for.

APPENDIX B

Remotely managing your system through an RS-232 serial interface

Field	Possible values	Description
target usb1source	<ul style="list-style-type: none">• = VGA1• = HDMI1• = Disabled	Value to set the usb1 switch enabled source to. Note that this should not be the same as the usb2source. If it is, USB1 will be used and USB2 is ignored.
current usb2source	<ul style="list-style-type: none">• VGA1• HDMI1• Disabled	Current value that the USB2 switch will be enabled for.
target usb2source	<ul style="list-style-type: none">• = VGA1• = HDMI1• = Disabled	Value to set the usb2 switch enabled source to. Note that this can not be the same as the usb1source. If it is, USB1 will be used and USB2 is ignored.

Example:

```
> set input=vga1
input = vga1
> set input=next
input = composite
> get videoinputs
videoinputs = vga1, composite, hdmi1
> get usb1source
usb1source = vga1
> get usb2source
usb2source = hdmi1
> set usb2source = hdmi1
usb2source = hdmi1
>
```

Video Control

Video output related controls. The range of values used for these commands should match the range displayed visually on the OSD. The firmware must handle videofreeze and videomute states correctly. A change should be made to ensure that videofreeze and videomute are mutually exclusive.

Command\response definitions

Command	Response	Responds when powered off
set displaymode [target]	displaymode =[current]	no
get displaymode	displaymode =[current]	no
set brightness [target]	brightness=[current]	no

APPENDIX B

Remotely managing your system through an RS-232 serial interface

get brightness	brightness=[current]	no
set contrast [target]	contrast=[current]	no
get contrast	contrast=[current]	no
set frequency [target]	frequency =[current]	no
get frequency	frequency =[current]	no
set tracking [target]	tracking =[current]	no
get tracking	tracking =[current]	no
set saturation [target]	saturation =[current]	no
get saturation	saturation =[current]	no
set tint [target]	tint =[current]	no
get tint	tint =[current]	no
set sharpness [target]	sharpness =[current]	no
get sharpness	sharpness =[current]	no
set hposition [target]	hposition =[current]	no
get hposition	hposition =[current]	no
set vposition [target]	vposition =[current]	no
get vposition	vposition =[current]	no
set whitepeaking [target]	whitepeaking =[current]	no
get whitepeaking	whitepeaking =[current]	no
set degamma [target]	degamma=[current]	no
get degamma	degamma=[current]	no
set red [target]	red=[current]	no
get red	red=[current]	no
set green [target]	green=[current]	no
get green	green=[current]	no
set blue [target]	blue=[current]	no
get blue	blue=[current]	no
set cyan [target]	cyan =[current]	no
get cyan	cyan =[current]	no

APPENDIX B

Remotely managing your system through an RS-232 serial interface

set magenta [target]	magenta =[current]	no
get magenta	magenta =[current]	no
set yellow [target]	yellow =[current]	no
get yellow	yellow =[current]	no
set videofreeze [target]	videofreeze =[current]	no
get videofreeze	videofreeze =[current]	no
set displayhide	displayhide = [target]	no
get displayhide	displayhide = [target]	no

Field definitions

Field	Possible values	Description
target displaymode	<ul style="list-style-type: none">• = SMART Presentation• = Bright room• = Dark room• = sRGB• = User	The ranges must match the OSD ranges
current displaymode	<ul style="list-style-type: none">• SMART Presentation• Bright room• Dark room• sRGB• User	The ranges must match the OSD ranges
target brightness	<ul style="list-style-type: none">• + val• – val• = 0 ~ 100	Specifying + or – will cause brightness to be incremented or decremented from it's current value. Specifying a numerical value within the possible range causes brightness to be set directly to that value.
current brightness	<ul style="list-style-type: none">• = 0 ~ 100	The device's current brightness.
target contrast	<ul style="list-style-type: none">• + val• – val• = 0 ~ 100	Specifying + or – will cause contrast to be incremented or decremented from its current value. Specifying a numerical value within the possible range causes contrast to be set directly to that value.
current contrast	<ul style="list-style-type: none">• = 0 ~ 100	The device's current contrast.

APPENDIX B

Remotely managing your system through an RS-232 serial interface

target frequency	<ul style="list-style-type: none">• + val• - val• = -5 ~ +5	The ranges must match the OSD ranges
current frequency	<ul style="list-style-type: none">• = -5 ~ +5	The ranges must match the OSD ranges
target tracking	<ul style="list-style-type: none">• + val• - val• = 0 ~ 31	The ranges must match the OSD ranges
current tracking	<ul style="list-style-type: none">• = 0 ~ 31	The ranges must match the OSD ranges
target saturation	<ul style="list-style-type: none">• + val• - val• = 0 ~ 100	The ranges must match the OSD ranges
current saturation	<ul style="list-style-type: none">• = 0 ~ 100	The ranges must match the OSD ranges
target tint	<ul style="list-style-type: none">• + val• - val• = 0 ~ 100	The ranges must match the OSD ranges
current tint	<ul style="list-style-type: none">• = 0 ~ 100	The ranges must match the OSD ranges
target sharpness	<ul style="list-style-type: none">• + val• - val• = 0 ~ 31	The ranges must match the OSD ranges
current sharpness	<ul style="list-style-type: none">• = 0 ~ 31	The ranges must match the OSD ranges
target hposition	<ul style="list-style-type: none">• + val• - val• = 0 ~ 100	The ranges must match the OSD ranges
current hposition	<ul style="list-style-type: none">• = 0 ~ 100	The ranges must match the OSD ranges
target vposition	<ul style="list-style-type: none">• + val• - val• = -5 ~ +5	The ranges must match the OSD ranges. Values depend upon the source?
current vposition	<ul style="list-style-type: none">• = -5 ~ +5	The ranges must match the OSD ranges
target whitepeaking	<ul style="list-style-type: none">• + val• - val• = 0 ~ 10	The ranges must match the OSD ranges
current whitepeaking	<ul style="list-style-type: none">• = 0 ~ 10	The ranges must match the OSD ranges
target degamma	<ul style="list-style-type: none">• + val• - val• = 0 ~ 3	The ranges must match the OSD ranges
current degamma	<ul style="list-style-type: none">• = 0 ~ 3	The ranges must match the OSD ranges

APPENDIX B

Remotely managing your system through an RS-232 serial interface

target red	<ul style="list-style-type: none">• + val• – val• = 0 ~ 100	The ranges must match the OSD ranges
current red	<ul style="list-style-type: none">• = 0 ~ 100	The ranges must match the OSD ranges
target green	<ul style="list-style-type: none">• + val• – val• = 0 ~ 100	The ranges must match the OSD ranges
current green	<ul style="list-style-type: none">• = 0 ~ 100	The ranges must match the OSD ranges
target blue	<ul style="list-style-type: none">• + val• – val• = 0 ~ 100	The ranges must match the OSD ranges
current blue	<ul style="list-style-type: none">• = 0 ~ 100	The ranges must match the OSD ranges
target cyan	<ul style="list-style-type: none">• + val• – val• = 0 ~ 100	The ranges must match the OSD ranges
current cyan	<ul style="list-style-type: none">• = 0 ~ 100	The ranges must match the OSD ranges
target magenta	<ul style="list-style-type: none">• + val• – val• = 0 ~ 100	The ranges must match the OSD ranges
current magenta	<ul style="list-style-type: none">• = 0 ~ 100	The ranges must match the OSD ranges
target yellow	<ul style="list-style-type: none">• + val• – val• = 0 ~ 100	The ranges must match the OSD ranges
current yellow	<ul style="list-style-type: none">• = 0 ~ 100	The ranges must match the OSD ranges
target videofreeze	<ul style="list-style-type: none">• = on• = off	Video Freeze on/off
current videofreeze	<ul style="list-style-type: none">• = on• = off	Video Freeze on/off
current displayhide	<ul style="list-style-type: none">• normal• frozen• muted	Matches the 3 states of the hide button on the IR remote controller
target displayhide	<ul style="list-style-type: none">• normal• frozen• muted• next	Allows for setting of the mode directly or to move from one state to the next sequentially.

The above commands can be used to set the property to an absolute value or cause a relative adjustment to be made to the current value. Examples of using this are below:

APPENDIX B

Remotely managing your system through an RS-232 serial interface

```
>get brightness
brightness=55
>set brightness = 65
brightness=65
>set brightness +5
brightness=70
>set brightness-15
brightness=55
>
```

All video commands should also have an optional source specification.

```
>set brightness = 65
brightness=65
This sets the brightness of the specified source.
>set brightness vga1 = 65
brightness vga1 = 65
```

This sets the brightness of the vga1 regardless of whether the projector is on this source or not. The operational parameters are 'vga1', 'composite', 'hdmi1'.

Audio Control

Audio output related controls. The range of values used for these commands should match the range displayed visually on the OSD.

Command/response definitions

Command	Response	Powered off
set volume [target]	volume=[current]	no
get volume	volume=[current]	no
set mute [target]	mute=[current]	no
get mute	mute=[current]	no
set volumecontrol [target]	volumecontrol=[current]	no
get volumecontrol	volumecontrol=[current]	no
set cc [target]	cc=[current]	no
get cc	cc=[current]	no
set sysoutputsw [target]	sysoutputsw = [current]	no

APPENDIX B

Remotely managing your system through an RS-232 serial interface

Command	Response	Powered off
get sysoutputsw	sysoutputsw = [current]	no
Field definitions		
Field	Possible values	Description
target volume	<ul style="list-style-type: none">• + val• – val• = -20 to 20	Specifying + or – will cause volume to be incremented or decremented from its current value. Specifying a numerical value within the possible range causes volume to be set directly to that value. When the volume is modified from the RS232, the OSD volume slider should also appear on the screen identical to the slider that appears when using the other control. Note that -20 should map to 0 and 20 should map to 40.
current volume	<ul style="list-style-type: none">• -20 to 20	The device's current volume. Note that -20 should map to 0 and 20 should map to 40.
target mute	<ul style="list-style-type: none">• = on• = off	Specifies whether mute is enabled or disabled.
current mute	<ul style="list-style-type: none">• = on• = off	Current state of the mute
current volumecontrol	<ul style="list-style-type: none">• = on• = off	Current state of the volume control
target volumecontrol	<ul style="list-style-type: none">• = on• = off	Specifies whether volume control is enabled or disabled.
target cc	<ul style="list-style-type: none">• = cc1• = cc2• = off	Closed captioning states
current cc	<ul style="list-style-type: none">• = cc1• = cc2• = off	Closed captioning states
target sysoutputsw	<ul style="list-style-type: none">• = line+spkr• = line• = spkr• = none	Specifies whether the system output switch is line out only, speaker only, both, or none.
current sysoutputsw	<ul style="list-style-type: none">• = line+spkr• = line• = spkr• = none	Current state of system output switch.

APPENDIX B

Remotely managing your system through an RS-232 serial interface

The above commands can be used to set the property to an absolute value or cause a relative adjustment to be made to the current value. Examples of using this are below:

```
>get volume  
volume=0  
>set volume=-10  
volume=-10  
>set volume +5  
volume=-5  
>set volume -15  
volume=-20
```


Network information

Various network information.

Command/response definitions

Command	Response	Powered off
get netstatus	netstatus =[current]	yes
set network	network =[current]	yes
get network	network =[current]	yes
set dhcp [target]	dhcp =[current]	yes
get dhcp	dhcp =[current]	yes
set ipaddr [target]	ipaddr =[current]	yes
get ipaddr	ipaddr =[current]	yes
set subnetmask [target]	subnetmask = [current]	yes
get subnetmask	subnetmask = [current]	yes
set gateway [target]	gateway =[current]	yes
get gateway	gateway =[current]	yes
set primarydns [target]	primarydns =[current]	yes
get primarydns	primarydns =[current]	yes
get macaddr	macaddr =[MAC address]	yes

Field definitions

Field	Possible Values	Description
current netstatus	<ul style="list-style-type: none"> connected disconnected 	Current state of the network interface
current network	<ul style="list-style-type: none"> on off 	Current status of the network module and VGA output

APPENDIX B

Remotely managing your system through an RS-232 serial interface

Field	Possible Values	Description
target network	<ul style="list-style-type: none">• on• off	Enable/Disable network module and VGA output
current dhcp	<ul style="list-style-type: none">• = on• = off	Enable/Disable for DHCP Networking
target dhcp	<ul style="list-style-type: none">• on• off	Enable/Disable for DHCP Networking
current ipaddr	<ul style="list-style-type: none">• [?].[?].[?].[?]	Current IP address (static or dhcp assigned)
target ipaddr	<ul style="list-style-type: none">• [?].[?].[?].[?]	Set to static IP Address
current subnetmask	<ul style="list-style-type: none">• [?].[?].[?].[?]	Current Subnet Mask
target subnetmask	<ul style="list-style-type: none">• = [?].[?].[?].[?]	Current Subnet Mask
current gateway	<ul style="list-style-type: none">• [?].[?].[?].[?]	Current gateway
target gateway	<ul style="list-style-type: none">• = [?].[?].[?].[?]	Current gateway
current primarydns	<ul style="list-style-type: none">• [?].[?].[?].[?]	Current primary dns
target primarydns	<ul style="list-style-type: none">• = [?].[?].[?].[?]	Current primary dns
MAC address	<ul style="list-style-type: none">• [?]-[?]-[?]-[?]-[?]-[?]	The device's MAC address.

System Information

Various system information.

Command/response definitions

Command	Response	Powered off
set autosignal [target]	autosignal =[current]	no
get autosignal	autosignal =[current]	no
set lampreminder [target]	lampreminder = [current]	no
get lampreminder	lampreminder = [current]	no
set highbrightness [target]	highbrightness = [current]	no
get highbrightness	highbrightness = [current]	no
set autopoweroff [target]	autopoweroff = [current]	no
get autopoweroff set zoom [target]	autopoweroff = [current]	no
set zoom [target]	zoom=[current]	no
get zoom	zoom=[current]	no
set projectorid [target]	projectorid =[current]	no
get projectorid	projectorid =[current]	no
set aspectratio [target]	aspectratio=[current]	no
get aspectratio	aspectratio=[current]	no
set projectionmode [target]	projectionmode = [current]	no
get projectionmode	projectionmode = [current]	no
set startupscreen [target]	startupscreen = [current]	no

APPENDIX B

Remotely managing your system through an RS-232 serial interface

Command	Response	Powered off
get startupscreen	startupscreen = [current]	no
set restoredefaults	restoredefaults= [current]	yes
get lamphrs	lamphrs=[current]	yes
set lamphrs [target]	lamphrs=0	yes
get syshrs	syshrs=[current]	yes
get resolution	resolution=[current]	no
get nativeaspectratio	nativeaspect=[native]	no
get fwverddp	fwverddp =[current]	yes
get fwvernet	fwvernet =[current]	yes
get fwvermpu	fwvermpu =[current]	yes
get serialnum	serialnum =[current]	yes
get fwverecp	fwverecp =[current]	yes
set language [target]	language=[current]	no
get language	language=[current]	no
set groupname [target]	groupname =[current]	no
get groupname	groupname =[current]	no
set projectormame [target]	projectormame = [current]	no
get projectormame	projectormame = [current]	no
set locationinfo [target]	locationinfo=[current]	no
get locationinfo	locationinfo=[current]	no
set contactinfo [target]	contactinfo =[current]	no
get contactinfo	contactinfo =[current]	no
get modelnum	modelnum=UF70, or UF70w	no Return the actual model of the projector

APPENDIX B

Remotely managing your system through an RS-232 serial interface

Command	Response	Powered off
set videomute [target]	videomute=[current]	no
get videomute	videomute=[current]	no
set vgaoutnetenable [target]	vgaoutnetenable = [current]	yes
get vgaoutnetenable	vgaoutnetenable = [current]	yes
set emergencyalertmsg [target]	emergencyalertmsg = [current]	no
get emergencyalertmsg	emergencyalertmsg = [current]	no
set emergencyalert [target]	emergencyalert= [current]	no
get emergencyalert	emergencyalert= [current]	no
get signaldetected	signaldetected= [current]	yes The response varies depending on the power mode.

Field definitions

Field	Possible Values	Description
target autosignal	<ul style="list-style-type: none">• = on• = off	The ranges must match the OSD ranges
current autosignal	<ul style="list-style-type: none">• on• off	The ranges must match the OSD ranges
target lampreminder	<ul style="list-style-type: none">• = on• = off	The ranges must match the OSD ranges
current lampreminder	<ul style="list-style-type: none">• on• off	The ranges must match the OSD ranges
target highbrightness	<ul style="list-style-type: none">• = on• = off	The ranges must match the OSD ranges
current highbrightness	<ul style="list-style-type: none">• on• off	The ranges must match the OSD ranges

APPENDIX B

Remotely managing your system through an RS-232 serial interface

Field	Possible Values	Description
target autopoweroff	<ul style="list-style-type: none"> • + val • – val • = 0 ~ 240 	The ranges must match the OSD ranges
current autopoweroff	<ul style="list-style-type: none"> • + val • – val • = 0 ~ 240 	The ranges must match the OSD ranges
target zoom	<ul style="list-style-type: none"> • + val • – val • = 0 ~ 30 	The ranges must match the OSD ranges
current zoom	<ul style="list-style-type: none"> • = 0 ~ 30 	The ranges must match the OSD ranges
target projectorid	<ul style="list-style-type: none"> • + val • – val • = 0 ~ 999 	The ranges must match the OSD ranges
current projectorid	<ul style="list-style-type: none"> • = 0 ~ 999 	The ranges must match the OSD ranges
target aspectratio	<ul style="list-style-type: none"> • = fill • = match • = 16:9 	<p>The ranges must match the OSD ranges.</p> <p>Fill:</p> <p>No matter what the input, the image is stretched, scaled etc to produce an image that matches the DMD device. So 16:9 in = 4:3 out for the XGA projector and 16:9 in = 16:10 out for the WXGA</p> <p>Match:</p> <p>The signal is scaled such that the input aspect ration is what is displayed. So 4:3 in = 4:3 out. 16:10 in = 16:10 in. 4:5 in = 4:5 out.</p> <p>16:9</p> <p>The signal is scaled and stretched to produce a 16:9 image.</p>
current aspectratio	<ul style="list-style-type: none"> • Fill • match • 16:9 	The ranges must match the OSD ranges
target projectionmode	<ul style="list-style-type: none"> • = front • = ceiling • = rear • = rear ceiling 	The ranges must match the OSD ranges

APPENDIX B

Remotely managing your system through an RS-232 serial interface

Field	Possible Values	Description
current projectionmode	<ul style="list-style-type: none">• = front• = ceiling• = rear• = rear ceiling	The ranges must match the OSD ranges
target startupscreen	<ul style="list-style-type: none">• = smart• = usercapture• = preview	The ranges must match the OSD ranges
current startupscreen	<ul style="list-style-type: none">• = smart• = usercapture• = preview	The ranges must match the OSD ranges
current reset	<ul style="list-style-type: none">• done	Sent once the reset has been performed.
current lamphrs	<ul style="list-style-type: none">• 0 ~ 5000	Current lamp hour usage
target lamphrs	<ul style="list-style-type: none">• 0	Clear the current lamp hour usage. Zero is the only valid value to be written.
current resolution	<ul style="list-style-type: none">• 800x600• 1024x768• ...• no signal	Current resolution of the input. Current resolution of the input. If no signal is detected, 'resolution=no signal' should be returned
native aspect ratio	<ul style="list-style-type: none">• 4:3 for UF70, 16:10 for UF70w	Native aspect ratio (kind of hardware settings). DLP resolution of the projector. Return the actual native aspect ratio of the projector.
current fwverddp	<ul style="list-style-type: none">• [?].[?].[?].[?]	Current firmware version. Eg 2.0.0.0
current fwvernet	<ul style="list-style-type: none">• [?].[?].[?].[?]	Network Processor Version
current fwvermpu	<ul style="list-style-type: none">• [?].[?].[?].[?]	MPU Version
current prjserialnum	<ul style="list-style-type: none">• [????????????]	Projector Serial Number
current fwverecp	<ul style="list-style-type: none">• [?].[?].[?].[?]	ECP Version

APPENDIX B

Remotely managing your system through an RS-232 serial interface

Field	Possible Values	Description
current language	<ul style="list-style-type: none">• Arabic• Czech• German• Danish• Greek Letters• English• Spanish• Finnish• French• Norwegian (Norsk)• Italian• Japanese• Simplified Chinese• Traditional Chinese• Korean• Dutch• Polish• Swedish• Portuguese (Portugal)• Russian• Hindi• Portuguese (Brazil)	Must match the OSD setting
target language	<ul style="list-style-type: none">• = above	Must match the OSD setting
target groupname	<ul style="list-style-type: none">• = User String	
current groupname	<ul style="list-style-type: none">• User String	
target projectormame	<ul style="list-style-type: none">• = User String	
current projectormame	<ul style="list-style-type: none">• User String	
target locationinfo	<ul style="list-style-type: none">• = User String	
current locationinfo	<ul style="list-style-type: none">• User String	
target contactinfo	<ul style="list-style-type: none">• = User String	
current contactinfo	<ul style="list-style-type: none">• User String	
current modelnum	<ul style="list-style-type: none">• User String	Must match the OSD screen

APPENDIX B

Remotely managing your system through an RS-232 serial interface

Field	Possible Values	Description
current videomute	<ul style="list-style-type: none">• on• off	The ranges must match the OSD ranges
target videomute	<ul style="list-style-type: none">• = on• = off	The ranges must match the OSD ranges
current vgaoutnetenable	<ul style="list-style-type: none">• on• off	Current status of the VGA Out Enable and Network Enable
target vgaoutnetenable	<ul style="list-style-type: none">• = on• = off	Value to set the VGA Out and Network Enable to.
current emergencyalertmsg	<ul style="list-style-type: none">• User String	Emergency Alert Message
target emergencyalertmsg	<ul style="list-style-type: none">• = User String	Emergency Alert Message
current emergencyalert	<ul style="list-style-type: none">• on• off	To display the alert message, set this value to on. To clear it, set it to off.
target emergencyalertmsg	<ul style="list-style-type: none">• = on• = off	If the message is being displayed, return on.
current signaldetected	<ul style="list-style-type: none">• true• false	If a signal is currently detected, then this command returns true. Otherwise false is returned.
Command List	<ul style="list-style-type: none">•	A listing of commands follows the response. This list does NOT include service information commands.

Service Information

These are commands used in servicing and manufacturing of the unit. They should be hidden from the user during normal operation.

Command/response definitions

Command	Response	Powered off
get displayhour	displayhour =[current]	no
set testpattern [target]	testpattern =[current]	no
set colorwheelidx [target]	colorwheelidx = [current]	no
get colorwheelidx	colorwheelidx = [current]	no
get failurelog	failurelog =[current]	yes
get error#	Error#=[current]	yes
set factoryreset [target]	factoryreset =[current]	yes
set highspeedfan [target]	highspeedfan = [current]	no
get highspeedfan	highspeedfan = [current]	no
set statereporting [target]	statereporting = [current]	yes
get statereporting	statereporting = [current]	yes
get poweroverride	poweroverride= [current]	no
set poweroverride [target]	poweroverride= [current]	no

Field Definitions

Field	Possible Values	Description
current displayhour	<ul style="list-style-type: none"> 0 ~ 20000 	Current Display hours.

APPENDIX B

Remotely managing your system through an RS-232 serial interface

Field	Possible Values	Description
target testpattern	<ul style="list-style-type: none"> • = ? 	Set the test pattern to pattern number X (1~4). If only one test pattern, call it test pattern 1.
current testpattern	<ul style="list-style-type: none"> • 1: Grid • 2: RED • 3: Green • 4: Blue • 5: Grey • 6: Black 	Current test pattern being displayed. Just return the test pattern number is OK. The built-in test pattern may be changed.
target colorwheelidx	<ul style="list-style-type: none"> • = ??? 	The ranges must match the OSD ranges
current colorwheelidx	<ul style="list-style-type: none"> • ??? 	The ranges must match the OSD ranges
current failurelog	<ul style="list-style-type: none"> • normal • overtemp • fanlock • fanDMD • fanblower • fansystem • lamperror • colorwheelbreak • lampignite • lampoverheat • lampdriver • lampoverhours 	Current error state that the projector is in. The modes are projector dependent.
Current error#	Provide the details of the specific error. '#' is the number recorded in the log. It ranges from 1 to 5. 1 indicates the most recent error and 5 indicates the oldest error.	The details include the failure reason, system hours, lamp hours, sensor temperature and lamp voltage. For example: error1=fansystem, syshrs:1000, lamphrs=1000, temp=60, volt=120. error2=lampoverheat, syshrs:3000, lamphrs=2900, temp=150, volt=120.
target factoryreset	<ul style="list-style-type: none"> • = true • = false 	If set to true, perform a factor reset. Otherwise do nothing.
current factoryreset	<ul style="list-style-type: none"> • = true • = false 	Set to true only if a factor reset is about to occur.
target highspeedfan	<ul style="list-style-type: none"> • = high • = normal 	The ranges must match the OSD ranges

APPENDIX B

Remotely managing your system through an RS-232 serial interface

Field	Possible Values	Description
current highspeedfan	<ul style="list-style-type: none">• high• normal	The ranges must match the OSD ranges
current statereporting	<ul style="list-style-type: none">• on• off	Current state reporting value
target statereporting	<ul style="list-style-type: none">• = on• = off	State reporting value desired.
current poweroverride	<ul style="list-style-type: none">• on• off	<p>Power override forces the projector to remain in the ON state when the command is received. This command is NOT persistent and does not get stored to non-volatile memory (cleared on power cycle).</p> <p>When this mode is enabled, the power button on the remote and the ECP must not turn off the projector.</p> <p>This command must also be added to the service menu so the user can disable it via the OSD.</p>
target poweroverride	<ul style="list-style-type: none">• = on• = off	Value to set the power override to.

Engineering commands

These commands are to be part of the RS232 list but not viewable by the “?” command

Command/response definitions

Command	Response	Powered off
set dbmsgon [target]	dbmsgon =[current]	no
get vgacalibration	vgacalibration = [current]	no
get waveformid	waveformid=[current]	no
get lampvoltage	lampvoltage = [current]	no
get temperature	temperature =[current]	no
set temperaturereport [target]	temperaturereport= [current]	no
set downloadlampdriver [target]	downloadlampdriver= [current]	no
clearfailurelog		no
set burnin		no
dwscaler#7537		no

Field definitions

Field	Possible Values	Description
target dbmsg	<ul style="list-style-type: none"> on off 	Turn on/off debug message.
current vgacalibration	<ul style="list-style-type: none"> ??? 	To get the status of ADC calibration while power on.
current waveformid	<ul style="list-style-type: none"> ??? 	To get waveform ID whilst power on.
current lampvoltage	<ul style="list-style-type: none"> ??? 	To get lamp voltage whilst power on.
current temperature	<ul style="list-style-type: none"> ??? 	To get system temperature whilst power on.

APPENDIX B

Remotely managing your system through an RS-232 serial interface

Field	Possible Values	Description
target temperaturereport	<ul style="list-style-type: none">onoff	Whilst setting to on, whilst high speed fan mode turn on, will send out system temperature each 5 seconds
target downloadlampdriver	<ul style="list-style-type: none">done	Auto program waveform while standby
clearfailurelog	<ul style="list-style-type: none">done	Clear all failure log for production burn in preparation.
dwscaler#7537		Enter DDP download mode

Additional commands

These commands & behaviours are to provide backward compatibility for legacy control interfaces.

Command/response definitions

Command	Execute command:	Behaviour
set input=VGA1	set input=VGA1	switch to VGA1 port
set input=HDMI	set input=NEXT	switch to next physical port
set input=Composite	set input=NEXT	switch to next physical port
set input=S-video	set input=NEXT	switch to next physical port
set input=VGA2	set input=NEXT	switch to next physical port

APPENDIX B

Remotely managing your system through an RS-232 serial interface

Unknown command

If an unknown command is received, the projector must identify this to the user. This is accomplished by sending the following response back to the user. Please note that there is a space between “Invalid” and “cmd.”

```
>dummycommand 2134  
invalid cmd=dummycommand 2134
```


Appendix C

Disabling user USB access

In some situations, you might want to disable the ECP's front USB port. Disabling the USB port prevents users from using or saving documents to USB drives using the ECP's front USB port. The other USB ports won't be deactivated as they're required for your interactive whiteboard and computer connections to function.

Follow these instructions to remove and cut the case on the ECP and then remove the USB jumper switch to disable the ECP's USB port.

CAUTION

Always use an anti-static wrist wrap when working on the ECP.


IMPORTANT

Do not perform this operation if you are unfamiliar with using jumper switches.

You require a Phillips No. 2 screwdriver, a pair of wire cutters and a pair of long-nose pliers to perform the following procedure.

To remove and cut the case on the ECP

1. Put the projector into Standby mode and then wait 15 minutes for it to cool down.
2. Disconnect the projector's power cable from the power socket.
3. Whilst holding the ECP to prevent it from falling, use a Phillips No. 2 screwdriver to remove the two screws from the bottom of the ECP. Place the screws in a safe place.

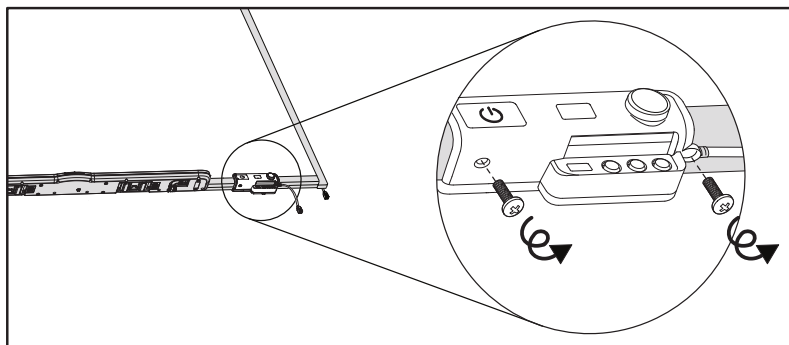


4. Remove all cables connected to the ECP.

APPENDIX C

Disabling user USB access

5. Locate the jumper cover between the “PC” and “SE240” labels on the side of the ECP that faces the wall.
6. Using a pair of wire cutters, cut through the two tabs on the jumper cover and remove it from the ECP. Keep the jumper cover in a safe place.

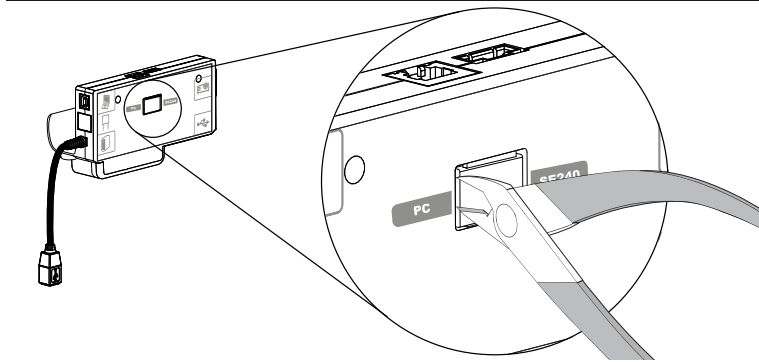


To remove the USB jumper switch

1. Locate the USB jumper behind the jumper cover port.
2. Using long-nose pliers, pull the jumper from the two connection posts and then place it on a single post.



IMPORTANT


- Only adjust the jumper position. Do not adjust the PC/SE240 switch, which is also accessible from this area.
- Do not discard the jumper. Discarding the jumper makes the USB deactivation difficult to reverse.

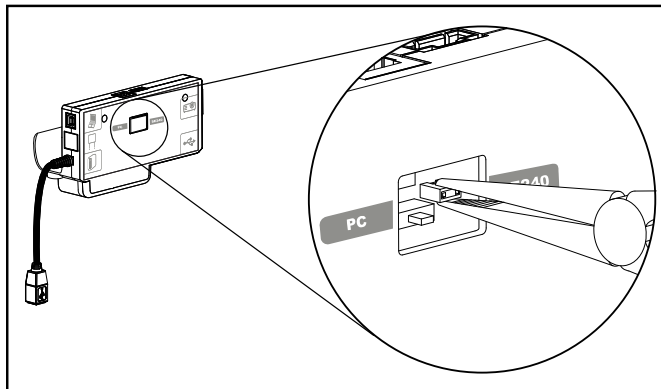

3. Insert the USB jumper cover into the USB A port on the front of the ECP.
4. Connect all cables to the ECP. See the *Using the Extended Control Panel (ECP)* on page 23 for more information.
5. Secure the ECP to your interactive whiteboard with the two screws that you removed previously.
6. Connect the projector's power cable to the power socket.

Appendix D

Remote control code definitions

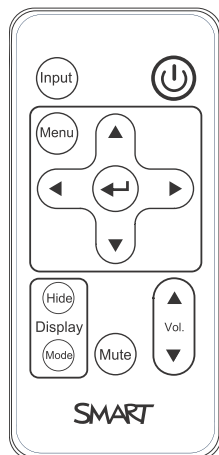

IR signal format: NEC1

Key	Repeat format	Vendor code		Key code	
		Byte 1	Byte 2	Byte 3	Byte 4
Input	F1	8B	CA	14	EB
Power (⏻)	F1	8B	CA	12	ED
Menu	F1	8B	CA	1B	E4
Up (▲)	F1	8B	CA	40	BF
Left (◀)	F1	8B	CA	42	BD
Enter (↵)	F1	8B	CA	13	EC
Right (▶)	F1	8B	CA	43	BC
Down (▼)	F1	8B	CA	41	BE
Hide	F1	8B	CA	15	EA
Volume up (▲)	F1	8B	CA	44	BB
Mode	F1	8B	CA	45	BA
Mute	F1	8B	CA	11	EE
Volume down (▼)	F1	8B	CA	46	B9

Appendix E

Hardware environmental compliance

SMART Technologies supports global efforts to ensure that electronic equipment is manufactured, sold and disposed of in a safe and environmentally friendly manner.

Waste Electrical and Electronic Equipment and Battery regulations (WEEE and Battery Directives)

Electrical and electronic equipment and batteries contain substances that can be harmful to the environment and to human health. The crossed-out wheelie-bin symbol indicates that products should be disposed of via an appropriate recycling facility and not as normal waste.



Batteries

Remote contains CR2025 battery. Recycle or dispose of batteries properly.

Perchlorate material

Contains perchlorate material. Special handling may apply. See dtsc.ca.gov/hazardouswaste/perchlorate.

Mercury

The lamp in this product contains mercury and must be recycled or disposed in accordance with local, regional and national legislation.



More information

See smarttech.com/compliance for more information.

Index

3

3.5mm audio connectors 22

A

About 1
accessories
 included 4
additional commands 90
alarms 59
application 66
aspect ratios 17, 27-28, 31-32, 58
audio 73
 connections for 22
 controlling volume of 24, 57
 muting 13
 resolving issues with 51

B

batteries 12, 97

C

closed captioning 57
composite video connections 32, 59
connection diagrams
 ECP 24
 projector 21
contact person 60
control panel 56

D

DHCP 18, 60
display modes 13-14, 57
DNS 60
dust iv

E

ECP
 about 3
 disabling USB communications for 93
 lights and status of 53
 using 23
electrostatic discharge iv
email alerts 61
emergency alerts 59
emissions iv
engineering commands 88
environmental requirements iv
eraser 5

F

fans 59
features 2
flickering 50
focus 20, 36
focusing 36
frozen image 50

H

hardware environmental compliance 97
HD signal compatibility 31
HDMI connections 22, 59
head space clearance 8
HEC 97
height 8
Help button 23
Home menu 56
hours 40
humidity iv

I

- image
 - adjusting 21
 - focusing 20
 - resolving issues with 48
- important information i
- information i
- input selection 24, 59
- installation
 - choosing a height 8
 - choosing a location 7
 - securing 8
- installing software 9
- integrating other devices 27
- interactive whiteboard
 - about 2
 - indicators and controls of 47
 - maintaining 35
 - using 23
- IP address 18, 56, 60

L

- lamp module
 - cleaning 35
 - replacing 37
- languages 57
- laptop computers
 - troubleshooting issues with 51
- letterboxing 28, 31
- light sources 7
- location 7, 60

M

- MAC support 28
- maintaining 35
- maintenance 35
- mercury 97
- module 37
- mounting template 8
- mute control 13, 15, 57

N

- native video formats 27
- network 76
- network communication 22, 52, 60
- network information 76

O

- original packaging 54

P

- passwords 18, 53, 61-62
- pen tray
 - about 2
 - locking to the interactive whiteboard 8
- pens 4
- perchlorate material 97
- peripheral sources 33
- pillarboxing 28, 31
- power 22, 24, 56, 66
- projector
 - about 3
 - adjusting settings for 14
 - adjusting the image of 21
 - cleaning 35
 - connection diagram for 21
 - displaying the name of 60
 - focusing the image of 20
 - installing 7
 - lights and status of 44
 - locating the serial number on 45
 - remotely managing 55, 63
 - replacing the lamp of 37
 - routing cables from 8
 - securing to the boom 8
 - using your remote control with 11
 - video format compatibility for 27

Q

- quad VGA support 28

R

RCA jacks 22, 24
 refresh rates 27-28
 remote control
 about 4
 code definitions for 95
 installing the battery 12
 using the buttons 13
 removing; replacing; lamp 37
 resetting 40
 RJ45 connector 22
 room control 55, 63
 RS-232 serial interface 22, 64

S

S-video connections 32
 SD signal compatibility 31
 serial interface See RS-232 serial interface
 serial number 45
 service information 85
 service menu 53
 signal loss 48
 SMART Board interactive
 whiteboard See interactive whiteboard
 SMART UF70 or UF70w
 projector See projector
 SMTP 61
 SNMP 62
 software 9
 sound See audio
 startup screen 58
 subnet mask 18, 60
 SVGA support 28
 SXGA support 28
 system information 78

T

temperatures, operating and storage iv
 transportation 54
 trap destination address 61
 troubleshooting 43

U

UF70 or UF70w projector See projector
 Unaligned 51
 USB drives 24, 93
 USB ports 22, 24, 59
 using 11
 UXGA support 28

V

VGA connections 5, 22, 59
 VGA support 28
 video
 connections for 22
 format compatibility for 27
 video control 68
 volume control 24

W

warnings iii
 water and fluid resistance iv
 webpage management 55
 WEEE and Battery Directives 97
 whiteboard See interactive whiteboard

X

XGA support 28

Z

zoom 58

SMART Technologies

smarttech.com/support

smarttech.com/contactsupport