

Getting Started

Using the SMART Board™ SBD600 Series Interactive Whiteboard

The SBD600 is a dual-touch, dual-write SMART Board™ interactive whiteboard. It enables two students to simultaneously use the interactive whiteboard.

This document explains how to switch between single-user and dual-user mode, and start using dual-touch.

Opening SMART Notebook Software

Two students can simultaneously touch or write on the interactive whiteboard using SMART Notebook software. Install SMART Notebook software and the SMART product drivers from the CD, and then open SMART Notebook software.

The *SMART Notebook* window appears, and the interactive whiteboard is automatically in single-user mode.

Switching Between Single-User and Dual-User Mode

If you want to use the whole interactive whiteboard, you can use the interactive whiteboard in single-user mode. As the only user, you can interact with the entire interactive whiteboard and write or draw using all four pen tray pens. If you want two students to simultaneously use the interactive whiteboard, switch to dual-user mode.

You can switch between single-user mode and dual-user mode at any time.

To select dual-user mode

Press **Dual Write Mode** .

To select single-user
mode

Press **Exit Dual Write Mode** .

Using the Interactive Whiteboard in Dual-User Mode

Each student can press their half of the screen with their finger to left-click, write using a pen tray pen and erase digital ink using the eraser. Each student can also access frequently used tools using their own Floating Tools toolbar.

To left-click

1. For the left side of the screen, ensure that the *black and red* pen tray pens are in the pen tray.

OR

For the right side of the screen, ensure that the *blue and green* pen tray pens are in the pen tray.
2. Press the interactive whiteboard with your finger.

To write or draw on the interactive screen

1. For the left side of the screen, pick up the *black or red* pen tray pen.

OR

For the right side of the screen, pick up the *blue or green* pen tray pen.
2. Write or draw on your half of the interactive screen.
3. When you finish writing and drawing, return the pen to the pen tray.

To erase digital ink

1. For the left side of the screen, ensure that the *black and red* pen tray pens are in the pen tray.

OR

For the right side of the screen, ensure that the *blue and green* pen tray pens are in the pen tray.
2. Pick up the eraser, and then press it on your half of the interactive screen to erase the digital ink.
3. When you finish erasing, return the eraser to the pen tray.

To select a Floating Tool

Press a tool in the Floating Tools toolbar. The available tools are **Select**, **Pen** (black, red, green and blue), **Highlighter**, **Eraser**, **Shapes**, **Lines** and **Customize**.

For more information on using Floating Tools, see the SMART Notebook software online Help system.
