



Unpacking the *Rear Projection* SMART Board™ Interactive Whiteboard

Unpacking Instructions

Remove the plastic bag and/or the plastic shrink wrap around the cabinet.

To remove the shipping brackets that hold the cabinet to the pallet

1. Remove the bolts.
2. Remove the wood blocks (some SMART Board™ 3000i interactive whiteboard models only).
3. Rotate the brackets 90° and down, and then remove them from the cabinet.
4. Unlock the casters, and then roll the cabinet down the ramp. We recommend that two people perform this task.
5. Refer to the *Rear Projection* SMART Board 3000i Interactive Whiteboard Installation Guide in the accessory box inside the cabinet for further installation instructions.

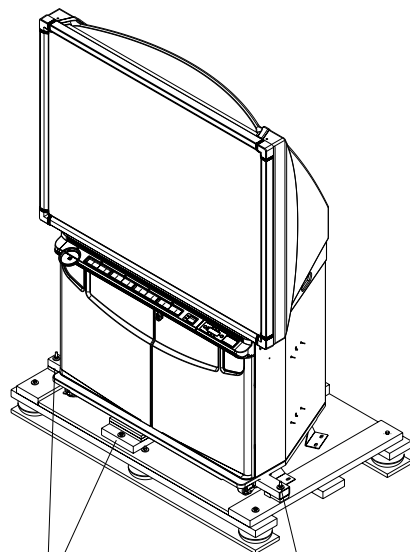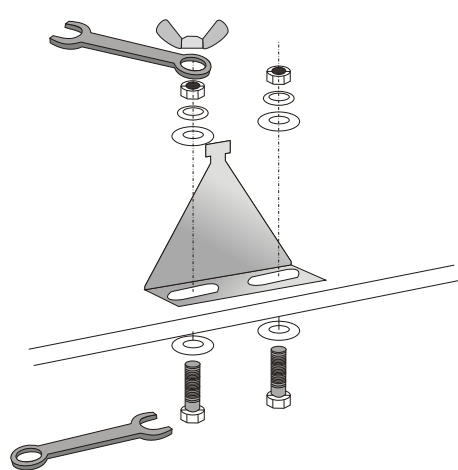

Remove the wood blocks before rolling the cabinet off the pallet.

