


SMART Table® 442i

Collaborative learning centre

Hardware user's guide

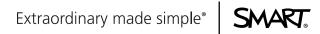

Product registration

If you register your SMART product, we'll notify you of new features and software upgrades.

Register online at smarttech.com/registration.

Keep the following information available in case you need to contact SMART Support.

Serial number:

Date of purchase:

Trade-mark notice

SMART Table, SMART Board, SMART Exchange, SMART Podium, DViT, SMART Notebook, SMART Document Camera, SMART Sync, smarttech, the SMART logo and all SMART taglines are trade-marks or registered trade-marks of SMART Technologies ULC in the US and/or other countries. Windows is either a registered trade-mark of Microsoft Corporation in the US and/or other countries. All other third-party product and company names may be trade-marks of their respective owners.

Copyright notice

© 2013 SMART Technologies ULC. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language in any form by any means without the prior written consent of SMART Technologies ULC. Information in this manual is subject to change without notice and does not represent a commitment on the part of SMART.

This product and/or use thereof covered by one or more of the following US patents.

www.smarttech.com/patents 03/2013

🚺 WARNING

i

- Failure to follow the installation instructions dispatched with your SMART Table® collaborative learning centre could result in personal injury and product damage.
- Ensure that any cables extending across the floor to your SMART product are properly bundled and marked to prevent a trip hazard.
- Make sure an electrical socket is near your SMART product and remains easily accessible during use.
- If you are using castors, lock the castors before allowing children to use your table.
- Do not climb (or allow children to climb) on your table. Climbing on your table could result in personal injury and product damage.
- To reduce the risk of fire or electric shock, do not expose your SMART product to rain or moisture.
- Unless you are following instructions in the SMART Table textless installation guide or installing a field replacement unit, do not attempt to service the table. Only an authorised service provider should provide service.
- Do not remove any screws other than those specified in the SMART Table textless installation guide or field replacement instructions.

CAUTION

- Disconnect the power cable only after you turn off the table as documented in this guide and the indicator lights and fans turn off. Disconnecting the power cable at any other time could result in damage to the table.
- Do not place cords, boxes or other items on the surface of your table. Doing so can scratch the surface.
- If your SMART product becomes wet, dry it completely before turning it on.

🚰 IMPORTANT

- Do not operate your table in environments that are higher than 3,000m (10,000') above sea level.
- Your table's surface does not respond to touch until the computer completes its start-up process. Wait 30 to 60 seconds after you turn on your table before you touch the surface.
- Before you clean your table, turn it off so that you do not inadvertently start applications when you wipe the surface.
- Do not place keyboards, mouse devices or other objects on the touch surface. The cameras may interpret these objects as touches if they are placed on the touch surface.
- Electrical and electronic equipment and batteries contain substances that can be harmful to the environment and to human health. The crossed-out wheeliebin symbol indicates that products should be disposed of via an appropriate recycling facility and not as regular waste.



 This product contains a lithium button cell battery in the computer (perchlorate material special handling may apply).

Contents

Chapter 1: Getting started	1
About your SMART Table	1
How your SMART Table works	
What's included with your SMART Table	2
Using your SMART Table with other SMART products	3
Chapter 2: Using your SMART Table	5
Turning your SMART Table on or off	5
Using SMART Table software	7
Connecting your SMART Table to the Internet	9
Using your SMART Document Camera with your SMART Table	11
Chapter 3: Maintaining your SMART Table	13
Cleaning your SMART Table	13
Updating the software	13
Calibrating the table	14
Appendix A: Troubleshooting	17
Troubleshooting power and connection issues	17
Troubleshooting hardware issues	17
Setting up your table for troubleshooting touch issues	
Diagnosing basic touch issues	19
Restarting SMART Table Activities	19
Appendix B: Hardware environmental compliance	
Waste Electrical and Electronic Equipment regulations (WEEE directive)	21
Restriction of Certain Hazardous Substances (RoHS directive)	21
Batteries	
Packaging	
Covered electronic devices	
China's Electronic Information Products regulations	

Chapter 1 Getting started

About your SMART Table	1
How your SMART Table works	
What's included with your SMART Table	2
Power cable	3
Installation instructions	3
Warranty information	3
Important information	3
Using your SMART Table with other SMART products	3

This guide is intended for teachers and application developers. It introduces you to SMART Table software and explains how to use, maintain and troubleshoot your table.

Ι ΝΟΤΕ

For information on setting up your SMART Table collaborative learning centre or its accessories, see the *SMART Table 442i textless installation instructions* (smarttech.com/kb/170315) included with your table.

About your SMART Table

Your SMART Table collaborative learning centre has a touch-sensitive surface. By touching the surface, students can create, select, move and resize digital objects. More than one student can touch the surface at a time. This encourages collaboration and cooperation as students learn and play together.



Using a Wi-Fi® network connection to a computer with

SMART Sync[™] classroom management software, teachers can observe students' tabletop activities from a distance, take control of the table, and capture and print the tabletop image.

SMART Table software includes interactive applications, learning activities and educational games. You can also download any of the SMART Table activity packs available on the SMART Exchange[™] website (exchange.smarttech.com) directly to the table.

Getting started

i note

Up to five activity packs can be downloaded at the same time.

Using the SMART Table Toolkit you can download activity packs and applications and customise the activities. Install and run the toolkit on your computer and then transfer your activity packs using a USB drive or SMART Sync software.

You can use your table with other SMART products, including the SMART Document Camera[™] and SMART Notebook[™] collaborative learning software, as part of an overall learning solution. For example, you can introduce a new concept to students on a SMART Board® interactive whiteboard, and then ask the students to explore the idea in detail using the SMART Table collaborative learning centre.

How your SMART Table works

Your table contains four main components:

- Computer
- Tabletop with LCD
- Speakers
- Cameras

The computer runs the SMART Table software, the LCD displays the computer's display in the tabletop, the speakers play the computer's audio and the cameras detect students' touch on the surface. Combined, these components enable students to interact with SMART Table software.

The computer, speakers and cameras are inside the table.

Your table uses technology based on DViT® (Digital Vision Touch) technology to detect multiple students' touches. Other SMART products use DViT technology, including some SMART Board interactive whiteboards, SMART Board interactive flat panels and SMART Podium[™] interactive pen displays.

What's included with your SMART Table

Your table includes the following items:

- Power cable
- Installation instructions
- Warranty information
- Important information

Power cable

The power cable provided with your SMART Table is specific to your region and should work with the sockets in your school.



Connect the power cable to the table following the instructions in the *SMART Table 442i textless installation instructions* (smarttech.com/kb/170315).

If you must extend the power cable across the floor, ensure that it's properly marked to prevent a trip hazard. SMART Technologies recommends that you connect the power cable to an extension cable rather than directly to a socket. If you lose the cable, or if it becomes damaged, contact your support representative for a replacement.

Installation instructions

Follow the *SMART Table 442i textless installation instructions* (<u>smarttech.com/kb/170315</u>) to unpack and set up your table.

Warranty information

Retain the warranty information in case an issue occurs with your table during the warranty period.

Important information

This document provides information important to read prior to installation of your table.

Using your SMART Table with other SMART products

The SMART Table collaborative learning centre complements several SMART products, including SMART Board interactive whiteboards, SMART Sync software and SMART Document Cameras. You can easily transfer files from your computer directly to the SMART Table using SMART Sync software or a USB drive. You can connect a SMART Document Camera directly to the table, enabling students to capture images in real-time and to explore them on the table's surface.

There is an optional power cable (Part No. ST-DCC) that can be used to power the SMART Document Camera from the table. This cable runs directly from the document camera to the table and prevents tripping hazards. When this cable is connected, the table powers the document camera. This cable is used in conjunction with the USB cable that is sent with your SMART document camera, which also runs directly from the document camera to the table.

Optional castors (Part No. ST-CSTR) are also available.

CHAPTER 1

Getting started

For more information on the cable, contact your authorised SMART reseller or go to <u>smarttech.com/where</u>.

Chapter 2 Using your SMART Table

Turning your SMART Table on or off	5
Turning on your SMART Table	6
Turning off your SMART Table	7
Using SMART Table software	7
Student mode	7
Teacher mode	. 8
Switching modes without inserting a USB drive	8
Connecting your SMART Table to the Internet	. 9
Using your SMART Document Camera with your SMART Table	11

Once you have set up your SMART Table as documented in the SMART Table 442i textless installation instructions (smarttech.com/kb/170315), it's ready to use.

CAUTION

Do not leave objects on the table's surface for extended periods.

Turning your SMART Table on or off

Once you have set up your table, you can turn it on or off by following these procedures.

Using your SMART Table

Turning on your SMART Table

To turn on your table

- 1. Connect the power cable to a socket.
- 2. Push the **Power** button on the side of your table.



The table's computer and LCD turn on. The computer completes its start-up process, and the *SMART Table Activities* menu appears.



🕝 IMPORTANT

Avoid touching the table surface until the table starts up and an image appears. Because the table is touch-sensitive, even though you cannot see an image, you could unintentionally disrupt the start-up process or start activities. Using your SMART Table

Turning off your SMART Table

CAUTION

If you press the **Power** button for more than 30 seconds, you could lose data or damage the computer.

The following procedure shows the correct way to turn off your table.

To turn off your table

1. From the SMART Table Activities menu, press the button in the corner.

If your table is set up to respond to input from more than one student, the Subtraction moves to another corner.

Repeat step 1 for each student you set up your table for.

2. A message appears, the table will begin shutting down in 30 seconds.

🚺 TIP

Press **Cancel** if you accidentally press the button.

Using SMART Table software

SMART Table Activities starts automatically when you turn on the table. The SMART Table *Activities* menu has two modes: Student and Teacher.

Student mode

Student mode is the default mode. It enables students to launch activities designed specifically for students in early primary.



CHAPTER 2 Using your SMART Table

Teacher mode


Teacher mode appears when you connect a USB drive to one of the USB ports on the side of your table. This mode enables you to set the number of students, calibrate the surface, synchronise and choose activity packs and applications, and complete other configuration tasks as documented in this guide.



For more information on SMART Table Activities, see the SMART Table software and SMART Table Toolkit user's guide (smarttech.com/kb/170414).

Switching modes without inserting a USB drive

You can also switch from Student mode to Teacher mode without inserting a USB drive.

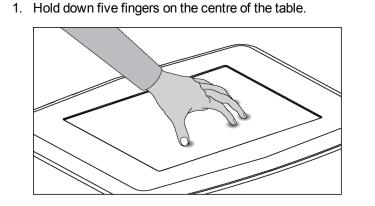

To switch from Student mode to Teacher mode without a USB drive

- After approximately 10 seconds, the *Cog wheel* icon appears in one corner of the table.
- 2. Whilst continuing to hold down your fingers on the centre of the table, press the **Cog wheel** icon with your other hand.

The menu switches to Teacher mode.

3. Press the **Cog wheel** icon to return to Student mode.

Using your SMART Table

Connecting your SMART Table to the Internet

This section provides information on connecting your table to the Internet through a wired local area network or wireless local area network. Connecting your table to the Internet enables you to download SMART Table activity packs from the SMART Exchange website directly onto your table. It also enables students to access the Internet from a SMART Notebook file with an embedded browser.

🕝 IMPORTANT

SMART recommends that virus protection software be installed on tables connected to the Internet. Consult your system administrator for more information on obtaining virus protection software for your table.

For information on downloading applications from the SMART Exchange website directly onto your table, see the SMART Table software and SMART Table Toolkit user's guide (smarttech.com/kb/170414).

Ι ΝΟΤΕ

If you're unable to connect your table to the Internet after completing the following procedures (for example, if a firewall or password requirement is blocking access), consult your system administrator.

To connect your table to a wireless local area network

1. Turn on your table.

The SMART Table Activities menu appears.

2. Connect your USB drive to your table.

OR

Follow the procedure in *Switching modes without inserting a USB drive* on the previous page.

The menu changes from Student mode to Teacher mode.

3. Press X and then press **OK**.

The SMART Table Activities menu closes.

4. Connect a keyboard and mouse to your table.

Ι ΝΟΤΕ

You can connect any keyboard and mouse that have USB connectors to any of the USB ports on the side of the table.

CHAPTER 2

Using your SMART Table

5. For information on completing the connection of your table to a wireless local area network, go to the Windows® 7 Help & How-to website (windows.microsoft.com/en-US/windows7/help) and search for the View and connect to available wireless networks help topic.

To connect your table to a wired local area network

🚺 TIP

SMART recommends that you connect the table to a wireless local area network. See *To connect your table to a wireless local area network* on the previous page.

Ι ΝΟΤΕ

You need to provide your own Ethernet cable.

See smarttech.com/kb/170403.

Using your SMART Document Camera with your SMART Table

With your document camera connected to your table, you can capture images directly from the document camera onto the table's screen when using applications that support this functionality.

The version of SMART Notebook software that's installed on your table is 3D-enabled, so you can use the Mixed Reality Tools for SMART Document Camera.

You can use the document camera's zoom feature from the control panel on the table's display. Refer to your *SMART Document Camera* user's guide for more information.

To connect your document camera to your table

- 1. Verify that your table is on and in Student mode.
- 2. Connect the USB cable's USB B plug to your document camera, and then connect the USB A plug to one of the USB ports on the side of the table.

Ι ΝΟΤΕ

There is an optional power cable (Part No. ST-DCC) that can be used to power the SMART Document Camera from the table. This cable runs directly from the document camera to the table and prevents tripping hazards. When this cable is connected, the table powers the document camera. This cable is used in conjunction with the USB cable that is sent with your SMART document camera, which also runs directly from the document camera to the table. For more information on the cable, contact your authorised SMART reseller or go to smarttech.com/where

🚺 TIP

Connect the document camera's USB cable to the USB port by the Power button on the table. This provides the most available bandwidth if you're connecting multiple devices to your table.

 Select an application that supports the use of the document camera, such as Media or SMART Notebook software.

The document camera icon appears on the table's desktop.



For more information on SMART Table Activities, see the SMART Table software and SMART TableToolkit user's guide (smarttech.com/kb/170414).

Chapter 3 Maintaining your SMART Table

Cleaning your SMART Table	13
Updating the software	13
Calibrating the table	14

Your SMART Table requires minimal maintenance. This chapter describes the four most common maintenance tasks.

Cleaning your SMART Table

Use an alcohol-free household glass cleaner to clean the surface at regular intervals.

Ι ΝΟΤΕ

Before you clean your SMART Table, turn it off so that you don't inadvertently start applications when you wipe the surface.

Updating the software

🕝 IMPORTANT

Refer to the SMART Table Software and SMART Table Toolkit User's Guide (smarttech.com/kb/170414) for instructions on checking the software version installed on your table computer and the latest information available on the downloads page of the SMART website (smarttech.com/downloads).

Calibrating the table

When you are using SMART Table activities and you or a student touch the table's surface, a white dot should appear directly below the touch point. If the dot doesn't align with your touch point, you might need to calibrate the table.

INOTE

The size and shape of the white dot depends on the type and size of the contact.

To calibrate the table

1. Turn on the SMART Table collaborative learning centre.

The SMART Table Activities menu appears.

2. Connect your USB drive to your table.

OR

Follow the procedure in Switching modes without inserting a USB drive on page 8.


The menu changes from Student mode to Teacher mode.

3. Press Calibrate.

The first calibration screen appears.



4. Press your finger on the centre of the first target until the red cross moves to the next target and then repeat this step for each target.

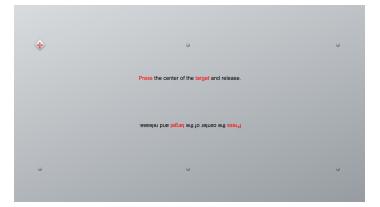


The display changes to the second calibration screen and a grid appears.

An example appears briefly to demonstrate how to draw across the screen to calibrate the surface.

CHAPTER 3

Maintaining your SMART Table

5. Use your finger to draw a spiral horizontally across the grid. As you draw, the ink is blue. As you complete each square, the square becomes green.

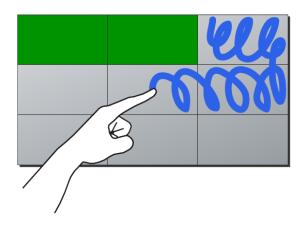

6. When all the squares are green, a progress bar appears.

When the progress bar is full, the table displays the message **Calibration successful**. **Please restart your table to complete the process**.

7. The table turns off.

Press the **Power** button to turn on the table

Appendix A Troubleshooting

Troubleshooting power and connection issues	
Troubleshooting hardware issues	17
Setting up your table for troubleshooting touch issues	
Diagnosing basic touch issues	19
Restarting SMART Table Activities	

If you set up your SMART Table collaborative learning centre following the procedures in the *SMART Table 442i textless installation instructions* (smarttech.com/kb/170315) included with your table, touch should work without any problems. However, if problems occur, follow the procedures in this chapter to resolve them. You can also visit smarttech.com/contactsupport to view and download how-to and troubleshooting articles and more.

Troubleshooting power and connection issues

🔄 IMPORTANT

Turn off your table before checking or disconnecting cables inside the pedestal.

The following table presents power-related issues and solutions if the table isn't operating properly:

Issue	Solution
The table isn't receiving power.	Check that the power cable is plugged in and the switch is on.
The Power button isn't illuminated.	Check that the power cable is plugged in and the switch is on.
There's no image on the LCD.	Contact SMART Support (smarttech.com/contactsupport).

Troubleshooting hardware issues

🕝 IMPORTANT

Turn off your table before checking or disconnecting cables inside the pedestal.

Troubleshooting

The following table presents hardware-related issues and solutions:

Issue	Solution
The table is overheated and will shut down in 29 seconds.	Allow the table to shut down and move it away from any heat sources.
The table is running hot.	Move the table away from any heat sources.
Touch performance has degraded because two or more cameras are malfunctioning.	Contact SMART Support (<u>smarttech.com/contactsupport</u>).
The table might need calibration.	Calibrate the table. See Calibrating the table on page 14.
There is a problem with one or more fans.	If the problem persists, contact SMART Support (smarttech.com/contactsupport).

Setting up your table for troubleshooting touch issues

The troubleshooting procedures in this section require you to close SMART Table Activities and then connect a keyboard and a mouse.

You can connect any keyboard and mouse that have any of the USB connectors to USB ports on the side of the table.

INOTE

After completing this procedure, see *Diagnosing basic touch issues* on the next page. When troubleshooting is complete, see *Restarting SMART Table Activities* on the next page.

To set up your table for troubleshooting

1. Turn on your table.

The SMART Table Activities menu appears.

2. Connect your USB drive to your table.

OR

Follow the procedure in Switching modes without inserting a USB drive on page 8.

The menu changes from Student mode to Teacher mode.

- 3. Connect a keyboard and mouse to your table.
- 4. Press 🔀.

SMART Table Activities software closes and the Windows desktop appears.

Troubleshooting

👉 IMPORTANT

Do not place keyboards, mouse devices or other objects on the touch surface. The cameras may interpret these objects as touches if they are placed on the touch surface.

Diagnosing basic touch issues

The following table presents basic touch-related issues and solutions.

Issue	Solution
Touch isn't working and the Windows desktop is visible.	SMART Table software isn't installed, or it isn't running. Click the SMART Table activities icon on the desktop to start the software.
Touch isn't working or doesn't line up with your contact point.	The calibration could be incorrect. See <i>Diagnosing basic touch issues</i> above.
You tried the solutions in this table but touch still isn't working.	Contact SMART Support (smarttech.com/contactsupport).

To calibrate your table from the Windows desktop

1. Press X.

SMART Table Activities software closes and the Windows desktop appears.

- 2. Press the Windows Start button.
- 3. Type "SMART settings" in the search box and then press ENTER.

The SMART Settings dialogue appears.

4. Under Tasks, pressOrientate/Align the SMART product.

The orientation screen appears.

5. Press your finger on the centre of the first target until the red cross moves to the next target and then repeat this step for each target.

The display changes to the calibration screen and a grid appears.

6. Use your finger to draw a spiral horizontally across the grid. As you draw, the ink is blue. As you complete each square, the square becomes green.

Restarting SMART Table Activities

After resolving problems with touch, restart SMART Table Activities.

To restart SMART Table Activities

1. Double-click the SMART Table Activities icon.

SMART Table Activities starts.

APPENDIX A

Troubleshooting

I NOTE

If you restart your table, SMART Table Activities starts automatically.

Appendix B Hardware environmental compliance

SMART Technologies supports global efforts to ensure that electronic equipment is manufactured, sold and disposed of in a safe and environmentally friendly manner.

Waste Electrical and Electronic Equipment regulations (WEEE directive)

Waste Electrical and Electronic Equipment regulations apply to all electrical and electronic equipment sold within the European Union.

When you dispose of any electrical or electronic equipment, including SMART Technologies products, we strongly encourage you to properly recycle the electronic product when it has reached the end of its life. If you require further information, please contact your reseller or SMART Technologies for information on which recycling agency to contact.

Restriction of Certain Hazardous Substances (RoHS directive)

This product meets the requirements of the European Union's Restriction of Certain Hazardous Substances (RoHS) directive 2002/95/EC.

Consequently, this product also complies with other regulations that have arisen in various geographical areas and that reference the European Union's RoHS directive.

Batteries

Batteries are regulated in many countries. Check with your reseller to find out how to recycle used batteries.

Hardware environmental compliance

There are special regulations that must be met when sending a product that has a lithium ion battery packaged with the product or sending a lithium ion battery. When returning a SMART Technologies product which contains a lithium ion battery or returning a lithium ion battery, call SMART Technologies RMA for information on the special transportation regulations.

- +1 866 518 6791, Option 4 (US/Canada)
- +1 403 228 5940 (all other countries)

For battery removal instructions, go to <u>smarttech.com/kb/170428</u>. Only an authorised service provider should provide service.

Packaging

Many countries have regulations restricting the use of certain heavy metals in product packaging. The packaging used by SMART Technologies to transport products complies with applicable packaging laws.

Covered electronic devices

Many US states classify monitors as covered electronic devices and regulate their disposal. Applicable SMART Technologies products meet the requirements of the covered electronic devices regulations.

China's Electronic Information Products regulations

China regulates products that are classified as EIP (Electronic Information Products). SMART Technologies products fall under this classification and meet the requirements for China's EIP regulations.

SMART Technologies

smarttech.com/support smarttech.com/contactsupport