


# Specifications

## LightRaise™ projector control (XCP)

### Model SLR-XCP

#### Physical specifications

<b>Size</b>	10" W × 2 5/8" H × 2 3/4" D (256 mm × 42 mm × 70 mm)
<b>Weight</b>	2 lb. 3 oz. (1 kg)
<b>Shipping size</b>	18" W × 6" H × 19" D (455 mm × 150 mm × 480 mm)
<b>Shipping weight</b>	4 lbs. 3 oz. (1.9 kg)

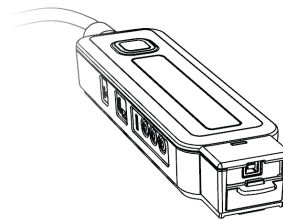

All dimensions +/- 1/8" (3 mm). All weights +/- 0.5 lb. (0.2 kg).

#### Standard features

<b>Connectors</b>	<ul style="list-style-type: none"><li>• SMART Connect USB B receptacle for an all-in-one audio, video and data connection using DisplayLink™ technology</li><li>• Recessed multi-pin connector for connecting the VGA + USB adapter or the HDMI™ + USB adapter</li><li>• 4-pin connector for room control</li><li>• RCA composite video input jack and audio input and output jacks associated with the VGA input (for peripheral devices such as DVD/Blu-ray player)</li></ul>
<b>Cables</b>	The attached XCP harness cable includes the cables you need to connect the XCP to the projector. However, you must supply the appropriate input cables for your devices.

## SPECIFICATIONS

LightRaise projector control (XCP) – Model SLR-XCP

**Power button** Tap the **Power** button to turn the projector on and off. The button illuminates to indicate the projector status as follows:

Color	Projector status
Solid green	Projector is on
Solid amber	Projector is in Standby mode
Flashing green	Projector is turning on
Flashing amber	Projector is cooling down before entering Standby mode
Not illuminated	Projector is off

**Volume controls** The XCP has the following volume controls:

- Volume strip: tap, tap and hold, or swipe to increase and decrease the volume. The volume strip's illumination brightens as you increase the volume.
- Volume mute: tap to mute the audio from the built-in projector speakers. The mute button turns amber when activated.
- A/V mute button: tap to freeze the current image and mute the audio presented by the projector. The A/V mute button turns amber when activated.

**Input switch** Tap the input switch to cycle through the supported input modes. Depending on which adapter is connected to the XCP, the supported input modes vary as follows:

Adapter connected	Input modes available
No adapter	SMART Connect or composite
VGA + USB adapter	VGA or composite
HDMI + USB adapter	HDMI or composite

**Active input LEDs** There are two input LEDs on the XCP. The LED on the side of the XCP indicates when the side composite connections are active. The LED on the front-bottom side of the XCP indicates when the SMART Connect is active.

**HDCP** The XCP supports HDCP encryption from any source device when connected using the HDMI adapter.

**Firmware** You can upgrade firmware through a USB connection to a computer that has SMART Product Updater (SPU) installed on it.

**Wall mount bracket** One bracket with two screws to support a wall-mounted XCP.

## SPECIFICATIONS

LightRaise projector control (XCP) – Model SLR-XCP

<b>Power requirements</b>	The XCP receives power from the projector through the 4-pin power mini-DIN 5V/2A connector on the XCP harness cable.
<b>Environmental compliance</b>	China EIP; EU REACH, RoHS, WEEE, Packaging and ErP Standby; US Packaging and Conflict Minerals
<b>Regulatory certification</b>	UL (US/Canada), CE, CB, TUV-GS, IC, FCC, C-Tick, GOST-R, NOM, PSB, PSE
<b>Warranty</b>	The XCP has a three-year limited equipment warranty. See warranty document for details.
<b>Reset button</b>	The reset button is recessed and can be pressed using a thin object such as a pencil.

## Installation

Installation instructions are included in the box and available online (see the *XCP to SLR60wi quick connect guide* at [smarttech.com/kb/170431](http://smarttech.com/kb/170431)).

## Storage and operating specifications

<b>Storage temperature</b>	-4°F to 122°F (-20°C to 50°C), up to 95% humidity (non-condensing)
<b>Operational temperature</b>	41°F to 95°F (5°C to 35°C), up to 95% humidity (non-condensing)

## SMART order numbers

<b>SLR-XCP</b>	LightRaise projector control (XCP)
<b>1017342</b>	Wall mounting bracket


## Optional accessories

<b>1020516</b>	RS-232 adapter cable
<b>1017070</b>	HDMI+ USB adapter
<b>1017071</b>	VGA + USB adapter

**SPECIFICATIONS**

LightRaise projector control (XCP) – Model SLR-XCP

**Physical dimensions**

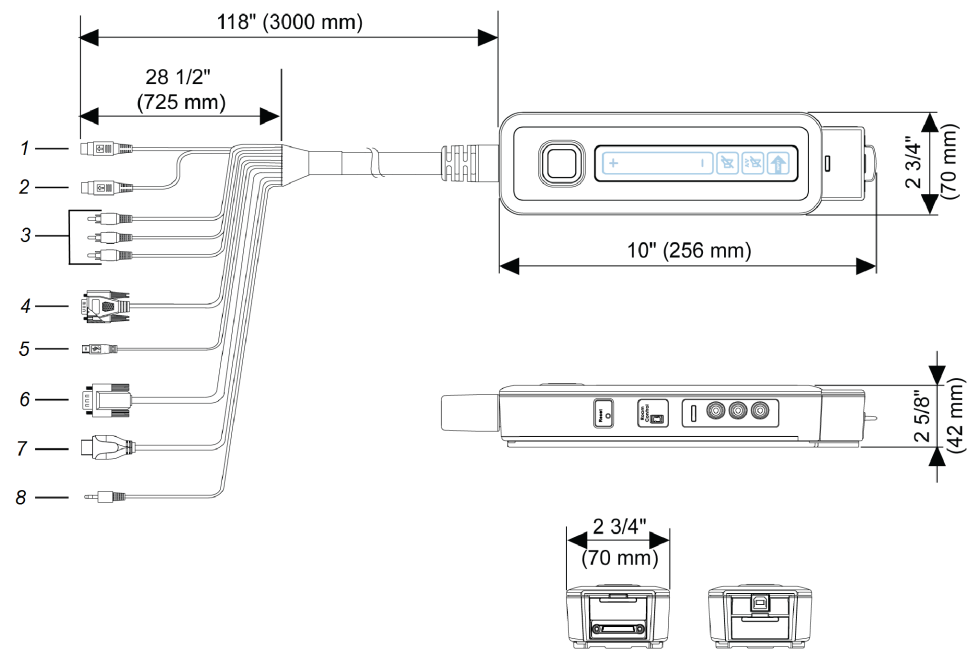

Number	Details
1	4-pin connector for room control
2	DC 5V 2A power connector
3	RCA composite video input and left and right RCA audio input
4	DB9 RS-232F connector
5	Touch USB connector
6	VGA connector
7	HDMI connector
8	Stereo 3.5 mm phone jack for audio line output

[smarttech.com/support](http://smarttech.com/support)  
[smarttech.com/contactsupport](http://smarttech.com/contactsupport)

© 2013 SMART Technologies ULC. All rights reserved. LightRaise, smarttech, the SMART logo and all SMART taglines are trademarks or registered trademarks of SMART Technologies ULC in the U.S. and/or other countries. HDMI is a trademark or registered trademark of HDMI Licensing LLC. All other third-party product and company names may be trademarks of their respective owners. This product and/or use thereof covered by one or more of the following U.S. patents: [www.smarttech.com/patents](http://www.smarttech.com/patents). Contents are subject to change without notice. 02/2013.